
Architectural Door Accessories

ASSA ABLOYOpening Solutions


Rim Cylinder Replacement Instructions For Locking Door Pulls

Experience a safer and more open world

1. Remove Rim Cylinder

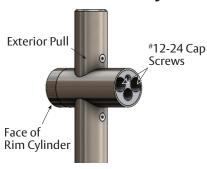


- 1. Remove exterior pull from door.
- 2. Locate (2) #12-24 cap screws on back side of pull.

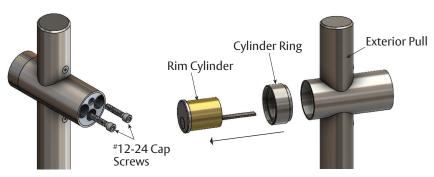


- 3. Remove both #12-24 cap screws with 5/32" hex wrench.
- 4. Once cap screws are removed the rim cylinder can be pulled out from the front of the pull.

2. Install Replacement Rim Cylinder

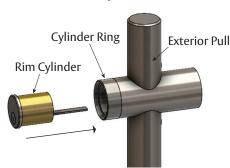

1. Insert replacement rim cylinder into face of exterior pull.

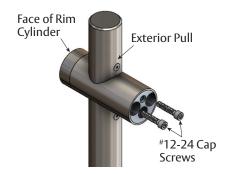


2. Insert and tighten both #12-24 cap screws into back of rim cylinder.



NOTE: Tail piece from rim cylinder can not protrude past the back of the exterior pull.

Tail Piece Length Specifications

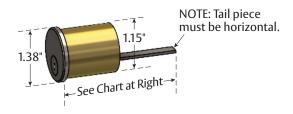

Door Thickness	Min. Length	Max. Length
3/8"	2 1/8"	3 1/8"
1/2"	2 1/2"	3 1/4"
3/4"	2 3/4"	3 1/4"
7/8"	3"	3 1/4"
1 3/8"	2 1/8"	3 1/8"
1 3/4"	2 1/2"	3 1/4"
2"	2 3/4"	3 1/4"
2 1/4"	3"	3 1/4"
2 1/2"	3 1/4"	3 1/4"

ASSA ABLOY Opening Solutions Architectural Accessories Group Rockwood, PA P: 800.458.2424 • F: 800.922.9212 www.assaabloydooraccessories.us