



**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Regular screwdriver and hammer.

1. Using screwdriver and hammer, carefully remove pin (A) from hinge.
2. Position door stop on top of hinge and tap hinge pin (A) into hinge using hammer. If hinge pin (A) is too large, remove bushing (B) by loosening bolt (C); retighten.
3. To adjust for desired degree of opening, loosen adjustment bolt (C) and slide stop arm (D). Retighten bolt.

NOTE: Two hinge pin door stops are recommended per door.

