

Item:
EL1WL-LED-WH
EL2WL-LED-GR



EMERGENCY LED REMOTE HEAD INSTALLATION INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS!



WARNING

- Make all electrical and ground connections in accordance with local codes or the National Electrical Code. If you are not familiar with these codes and requirements, consult a qualified electrician. This Professional should be familiar with the construction and operation of this product and hazards involved. Failure to do so may result in serious personal injury.
- To reduce the risk of fire, electric shock, personal injury, or property damage, please read and follow all safety instructions. If you do not understand these instructions or if any additional information is required, contact your local Topaz representative. Retain these instructions for maintenance reference.
- Do not exceed the allowed supply voltage marked on the luminaire label information.
- Disconnect power at the circuit breaker panel before any installation.

CAUTION

- Do not expose wire to any sharp objects such as sheet metal to prevent wiring damage or abrasion.
- While the light is on, please avoid direct eye exposure.
- Combustible material should be kept away from fixture/LENS.
- Do not make or alter any open holes in any enclosure or any electrical component during installation.
- Do not use when the enclosure is damaged or broken in any way.
- Do not alter, relocate or remove wiring, lamp holder power supply or any other electrical component.

Model	Input Voltage	Color Temp	Power	Lumen output
EL1WL-LED-WH	3-12VDC	4000K	.75W	90
EL2WL-LED-GR	3-12VDC	4000K	1.5W	180

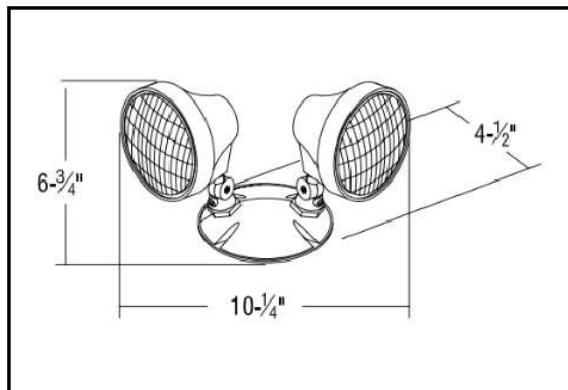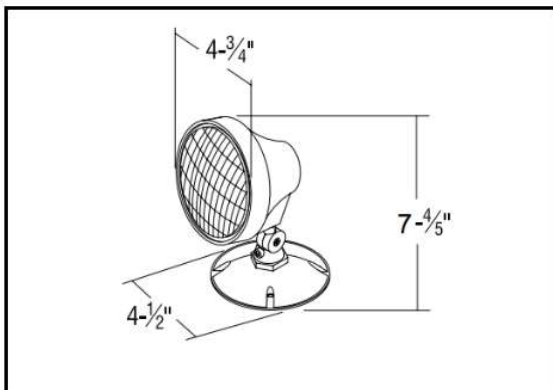


Item:
EL1WL-LED-WH
EL2WL-LED-GR



EMERGENCY LED REMOTE HEAD INSTALLATION INSTRUCTIONS

Wiring Diagram

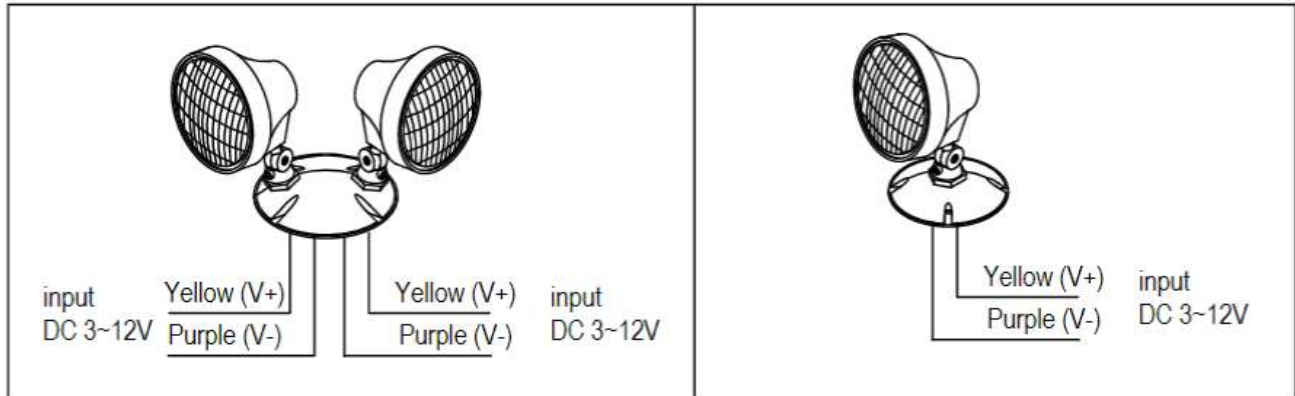

Instructions:

Step 1:

Make sure power is turned off before installing.

Step 2:

Connect the fixture Yellow wire to the positive(+) lead of the DC power supply, and the Purple wire to the negative(-) wire of the DC power supply. *See Wiring Diagram above*

Step 3:

Mount the fixture and aim the head(s) where light is needed.