


INSTALLATION GUIDE

Utility Thresholds

- 1 Measure and cut threshold to size as required.
- 2 Notch as necessary, to suit door frame.
- 3 Caulk underneath and around edges of threshold for moisture control.
- 4 Attach threshold to floor surface with screws provided.

Suggested Installation

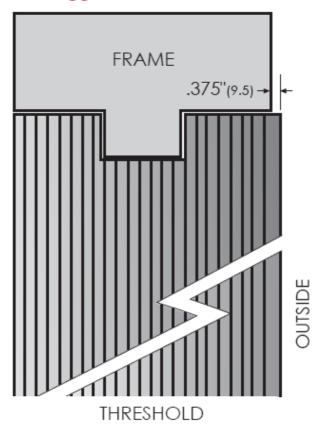

Phone: 845.352.3200 Fax: 845.367.4657