


BLUMOTION deactivation

Switch on hinge cup

For small or light doors, the BLUMOTION can be deactivated on one of the hinges.

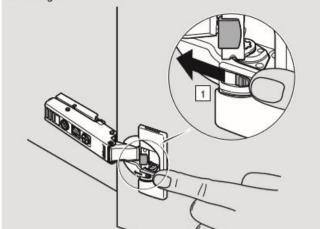

Door must be closed once for the deactivation to be complete. To reactivate, move switch back to original position.

