




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION GUIDE

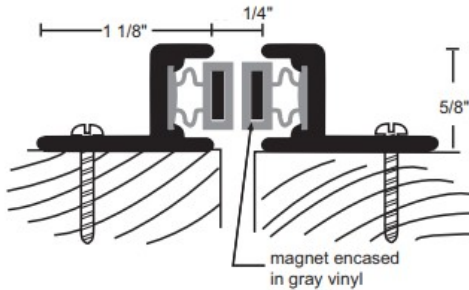

**BHMA
CERTIFIED**

Maximum distance between two pieces 5/16".

Install only on outside of out-swinging doors or inside of in-swinging doors.

Installation Instructions

1. Cut astragal to length.
2. Position astragal as shown above.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" drill bit.
5. Install with screws provided, working from top down, adjusting for proper distance at each screw.
6. Adjust astragal so it does not impede proper closing and latching of doors.



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com