



## **INSTALLATION GUIDE**

## Tools Required:


 
## **Installation Instructions:**

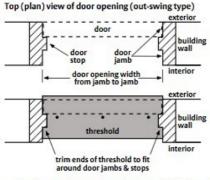

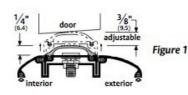

1. For best seal, in-swing door should be beveled 1/8" (3.2 mm) longer on inside. (See Figure 1).

- Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
- 3. Trim ends of threshold to fit around door jambs and stops, so that vinyl top is centered under door.
- 4. Trim vinyl to 1/16" longer than trimmed threshold at each end.
- Lift vinyl-top on free edge, revealing adjusting screws and mounting holes. Place threshold in position and mark through mounting holes for floor 5.
- 6. Remove threshold and drill pilot holes in floor at marks.
- 7. Press vinyl feet into grooves at underside of threshold legs.
- 8. Caulk ends of threshold (important for effective sealing and moisture control).
- 9. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)
- 10. Lift vinyl-top on free edge and adjust each adjusting screw until approximately 1/4" remains between the bottom of the door, when closed, and the top of the adjustable aluminum channel.

Phone: 845.352.3200

Fax: 845.367.4657

11. Insert free edge of vinyl-top into available retainer slot. Inspect to see that the vinyl-top is sealing against the bottom of the door when the door is closed. Remove one edge of vinyl-top from slot to access adjusting screw and re-adjust as necessary.