

INSTALLATION GUIDE

Tools Required:



Installation Instructions:

- 1. Remove pile.
- 2. Trim to length required.
- 3. Fasten housing at location desired with screws provided.
- 4. Reinsert pile in housing.
- 5. Crimp end to retain.