



**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

Instructions to adjust width of pull during installation and avoid scratching.

1. Unscrew the legs completely.
2. Remove set screw to loosen round ring/clamp.
3. Adjust ring/clamp to required width position.
4. Replace and tighten set screw.
5. Reattach legs.

