



**Trademark
HARDWARE**

INSTALLATION GUIDE

Tools Required:



Installation Instructions:

SURFACE MOUNTED ADJUSTABLE ASTRAGAL:

1. With the doors in closed position, center astragals over the gap between the doors and mark the mounting screw hole locations.
2. Drill appropriate size holes for the mounting screws provided.
3. Fasten the astragal to the door beginning with the top screw and work your way down the door.
4. Surface mounted adjustable astragals may be adjusted by simply turning adjustment screw which threads into a nylon bushing. Do not overtighten.
5. When two astragal bars without gasketing are used, they should not hit as the door is closed. Adjust the astragals so that when the doors are in closed position, a piece of paper slips between the astragals.