

# How to Measure and Install a Perimeter Door Gasket

A commonly overlooked area in properly sealing doors are the gaps around the perimeter of doors. Installing a proper seal along the door stop / frame provides higher sound control and prevents energy loss, thus lowering your utility bills. By applying specialized seals you can also halt the transfer of smoke and fire which ensures a greater safety factor.

Trademark Hardware sells only high quality, durable Perimeter Gaskets that will last through many usages. Read on how to measure for and install your custom sized door gaskets.

### How to Measure for a Perimeter Door Gasket



First measure the Door Stop along the header (top) of your door, from side to side (see Figure 1).

Next, measure the full length of your jamb (sides of your door), from the floor surface or doorway threshold to the top of your door header.

You can easily resize the door gasket on the field if necessary, so you might want to leave  $\frac{1}{2}$ " -  $\frac{3}{4}$ " (.5" - .75") room for error. Make note of your required dimensions.

# How to Install a Perimeter Door Gasket



## STEP 1: MEASURE AND TRIM DOOR GASKET

First measure and test the header piece to ensure it is not too long (see Figure 2).

If trimming is necessary, use a chop saw with a carbide blade to cut down to size.





#### STEP 2 and 3: INSTALL THE DOOR GASKET

Close the door and position the header piece. Seal should simply make light contact with the door. A fully compresses seal is not necessary and not recommended, as it will inhibit proper operation of door.

Mark screw position in the center of the hole and drill pilot

Secure header gasket with screws supplied (see Figure 3).

Test the door to ensure gasket is positioned correctly. If

necessary, loosen screws, reposition gasket and tighten screws again.

Repeat as above for the jambs of the door.

Simple as that! Once you finish installing your perimeter door gasket, enjoy the benefits of a properly sealed door for many years to come!

Trademark 148 Horton Drive, Suite B Phone: 845-388-1300 www.TMHardware.com Fax: 845-367-4657 sales@tmhardware.com

sales@tmhardware.com