




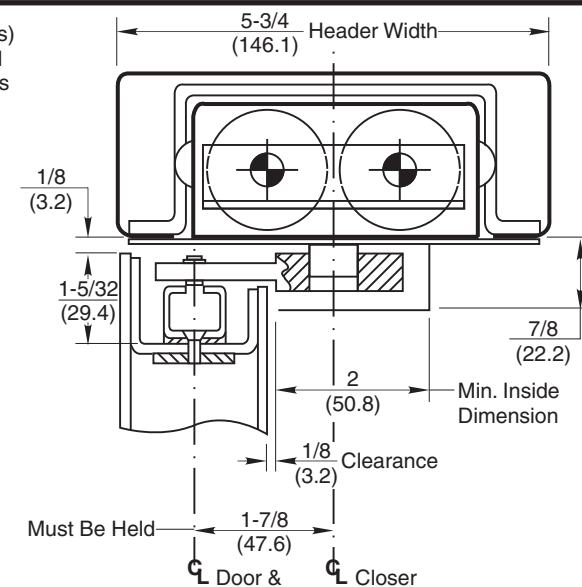

End View of Head Frame

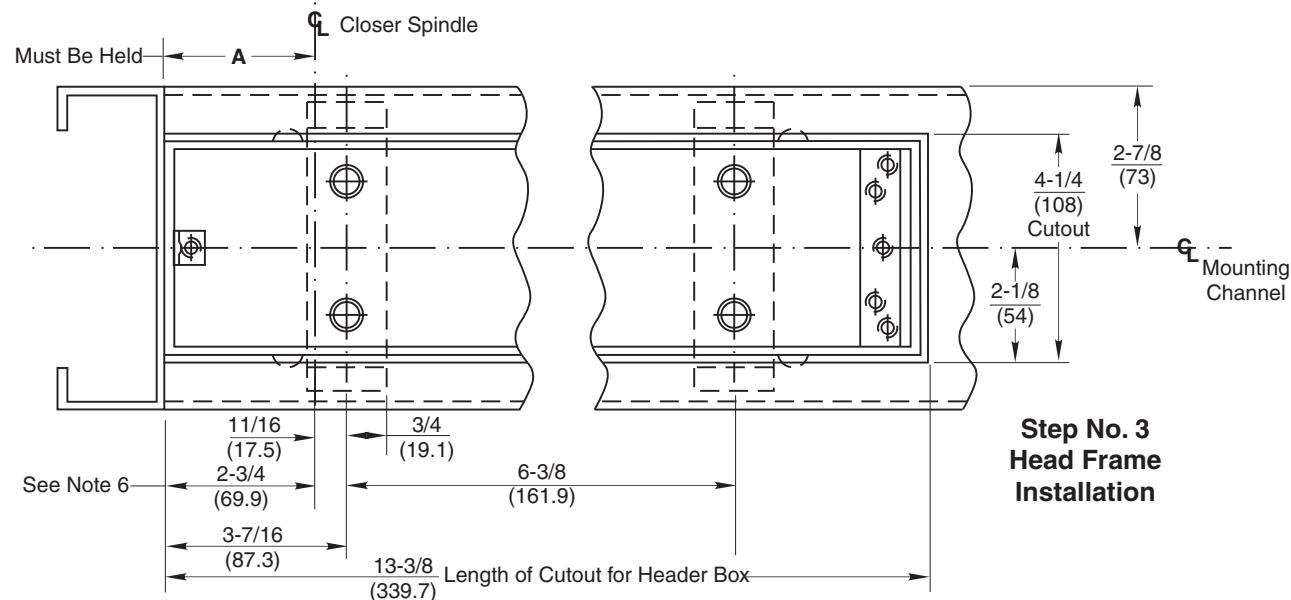


Step No. 3 Head Frame Installation

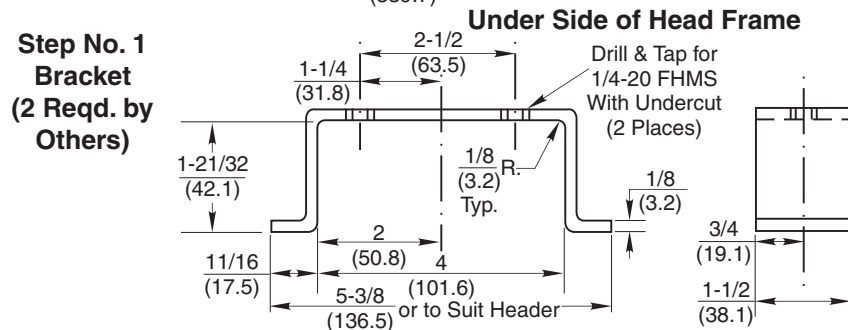

**Step No. 1
Bracket
(2 Req'd. by
Others)**

"A" = dimension from C/L of spindle to jamb		
Butt Hung	105°	4 (101.6)
	90°	2-7/8 (73)
Offset Hung	105°	4-3/4 (120.7)
	90°	3-3/4 (95.3)

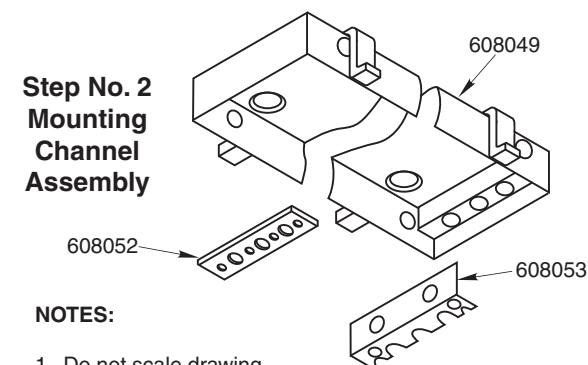

Step No. 2 Mounting Channel Assembly

NOTES:

1. Do not scale drawing.
2. Right hand door shown.
3. Minimum window head frame 2" (50.8) x 5-1/2" (139.7) (16 Ga. Max.).
4. Cover plate (not shown) 5" (127) wide x 14" (355.6) long. Cover plate to overlap cutout in frame.
5. All dimensions given in inches (mm).
6. 2-3/4 (69.9) = C/L of spindle to end of case.

692 Mounting Channel Offset and Butt Hung



ASSA ABLOY

TEMPLATE NUMBER

OC60400

REV

3

DATE _____

01/22