Architectural Door Accessories

ASSA ABLOY

Pemko Commercial Threshold

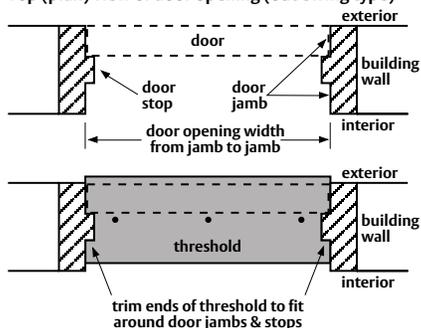The global leader in door opening solutions

Applies to the following products:

151, 270, 271, 272, 275, 276, 2748, 274X4, 2746X6, 2749, 2750, 170, 175, 175SS, 154, 154SS, 171, 172, 176, 2548, 254X4, 2549, 2550, 255X5, 256X6, 273, 274, 2746, 2748, 168, 252, 253, 254, 255, 256, 566, 766, 227, 229, 158, 2727, 2755, 190, 191, 192, 193, 228, 2286, 19125, 19325
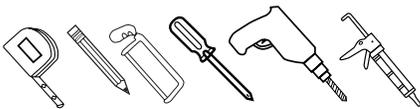
Installation Instructions:

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.

2. Trim ends of threshold to fit around door jambs and stops.

3. Drill pilot holes in floor through pre-drilled holes in threshold.

4. Caulk ends of threshold, and under full length of legs (important for effective sealing and moisture control).

5. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)

Top (plan) view of door opening (out-swing type)

Tools Required:

Testing/Ratings:

Gasketing material for fire doors intended for aplication to listed steel frames and/or classified steel covered composite type, and hollow metal type fire doors rated up to 3 hours; wood and plastic covered composite type fire doors rated up to 1-1/2 hours; and wood core type fire doors rated up to 20 minutes.
(Thresholds may or may not contain gasketing material).

TRADEMARK HARDWARE
WORLD OF QUALITY HARDWARE
WWW.TMHARDWARE.COM