

Architectural Door Accessories

ASSA ABLOY
Opening Solutions

Pemko Door Bottom Solutions



**TRADEMARK
HARDWARE**
WWW.TMHARDWARE.COM


Experience a safer
and more open world

Applies to the following door bottom product:

325XGSSN

Installation Instructions:

1. Measure, mark, and trim door bottom sweep to full width of door.
NOTE: Door Sweep should be installed on push side of door.
2. Measure, mark, and trim door bottom angle to full width of door.
NOTE: Door Bottom Angle should be installed on pull side of door. Clearance above finish floor should be $3/8"$.
3. Drill pilot holes in door at marks for each piece (both sides of the door).
NOTE: For wood doors, fasteners should be drilled into the door's bottom rail.
4. Install HSS9075XG onto bottom leg of angle (as shown).
5. Mount each piece to door with supplied fasteners.
NOTE: 325XGSSN sweep must be used with EG315XGSS angle for fire door applications where clearance under the door is in excess of clearances indicated in NFPA 80.

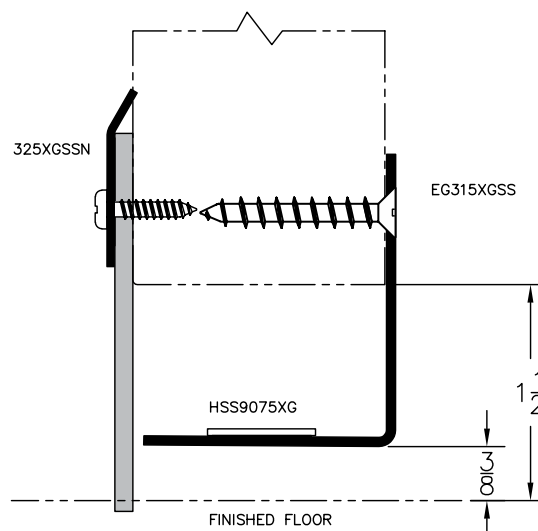


Testing/Ratings:

Excessive clearance solutions for door and frame clearances when installed per the manufacturer's instructions, intended for use with UL Classified steel composite, hollow metal doors, wood and plastic-covered composite core doors with UL Listed fire door frames up to 1-1/2 hour.



Tools Required:

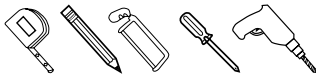

ASSA ABLOY Opening Solutions
Architectural Door Accessories
orders.pemko@assaabloy.com
www.assaabloydooraccessories.us

Memphis, TN USA
P: 800.824.3018
F: 800.243.3656

Ventura, CA USA
P: 800.283.9988
F: 800.283.4050

Vaughan, ON CA
P: 800.461.3007
F: 800.461.8989