




**TRADEMARK  
HARDWARE**

WORLD OF QUALITY HARDWARE

### INSTALLATION INSTRUCTIONS

**TOOLS REQUIRED:** Drill,  $\frac{3}{32}$ " drill bit, Phillips screwdriver, awl or pencil.

1. Position plate  $\frac{3}{4}$ " from edge of door and approximately 50" from bottom of door to center of plate.
2. Mark, drill and secure.

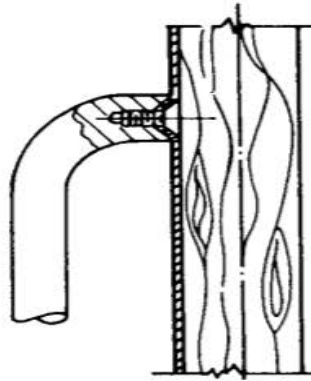

### PRE-MOUNTED HANDLE FOR EASY INSTALLATION

