




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, $\frac{3}{32}$ " drill bit, Phillips screwdriver, awl or pencil.

1. Position plate $\frac{3}{4}$ " from edge of door and approximately 50" from bottom of door to center of plate.
2. Mark, drill and secure.

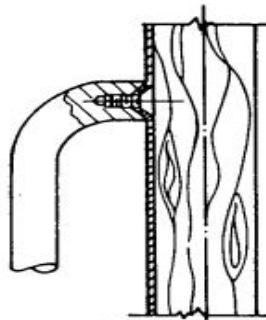

PRE-MOUNTED HANDLE FOR EASY INSTALLATION

