




**1** Prepare door for mortise lock.

See mortise lock instructions for preparation.


**2** Align trim template with horizontal cylinder center line (C) on pull side edge of door and secure with tape.

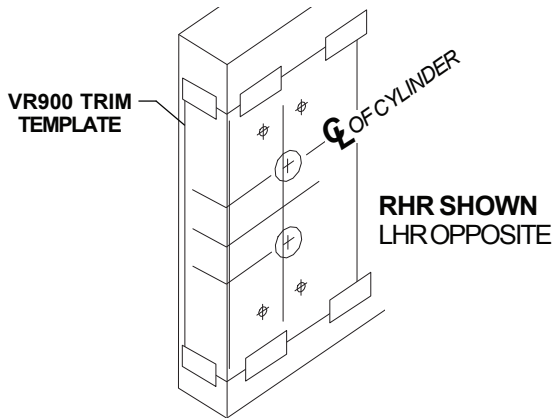


**3** Mark the center point of each hole with a punch.

**4** Using a square, transfer the 4 mounting hole locations to the opposite side of the door.



Hole dimensions and preparation are shown on template.

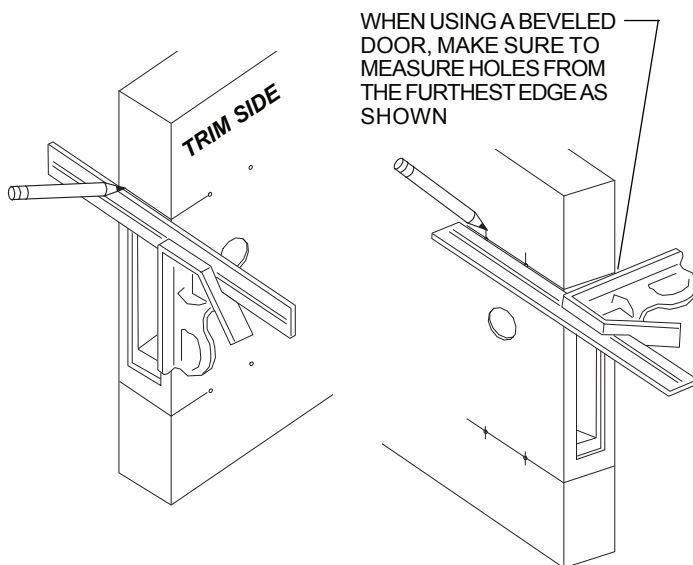

**5** Locate and prepare all trim holes as shown on template.

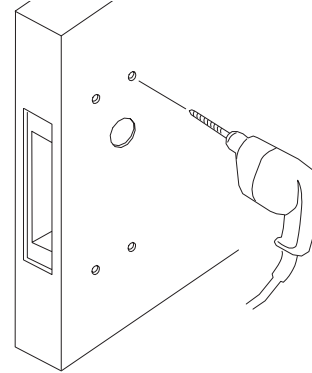

**6** Secure trim to pull side of door.

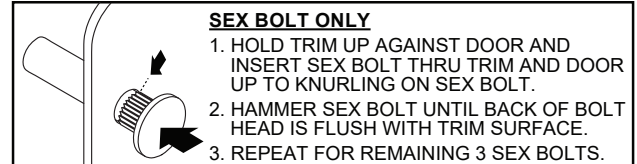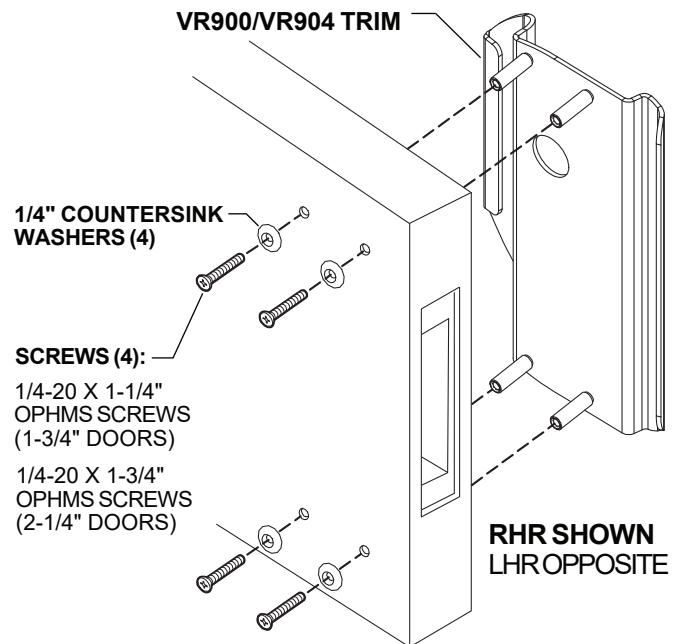

**7** See mortise lock instructions for mortise lock and cylinder installation.

