



**TRADEMARK
HARDWARE**

WWW.TMHARDWARE.COM

VR904LLP


IVES

Installation Instructions

1 Prepare door for mortise lock.

See mortise lock instructions for preparation.


2 Align trim template with horizontal cylinder center line (C) on pull side edge of door and secure with tape.

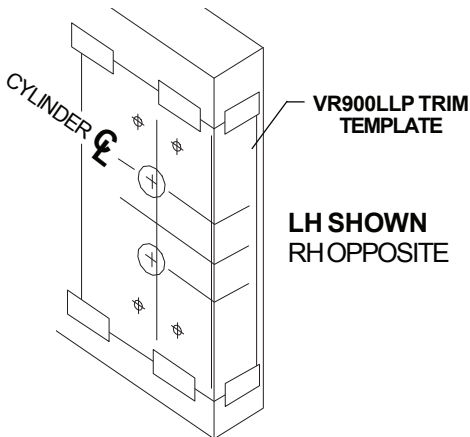


3 Mark the center point of each hole with a punch.

4 Using a square, transfer the 4 mounting hole locations to the opposite side of the door.


Hole dimensions and preparation are shown on template.

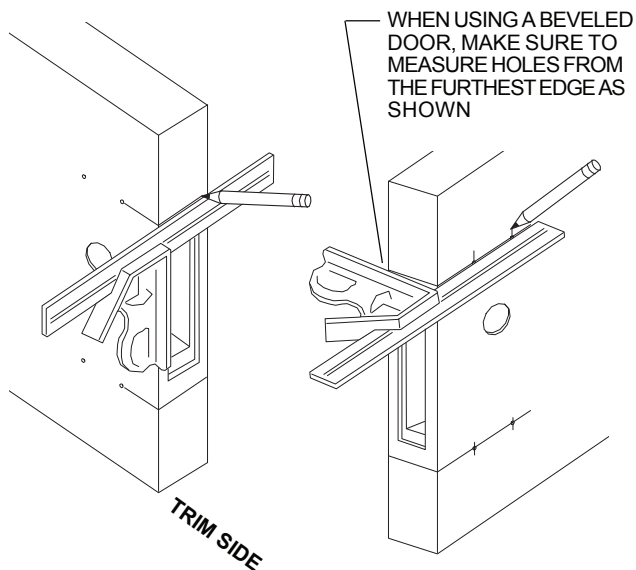


5 Locate and prepare all trim holes as shown on template.

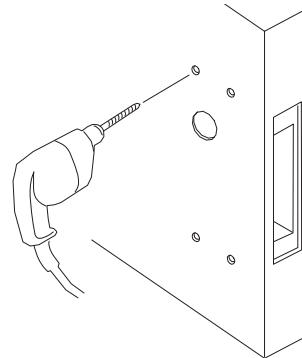

6 Secure trim to pull side of door.

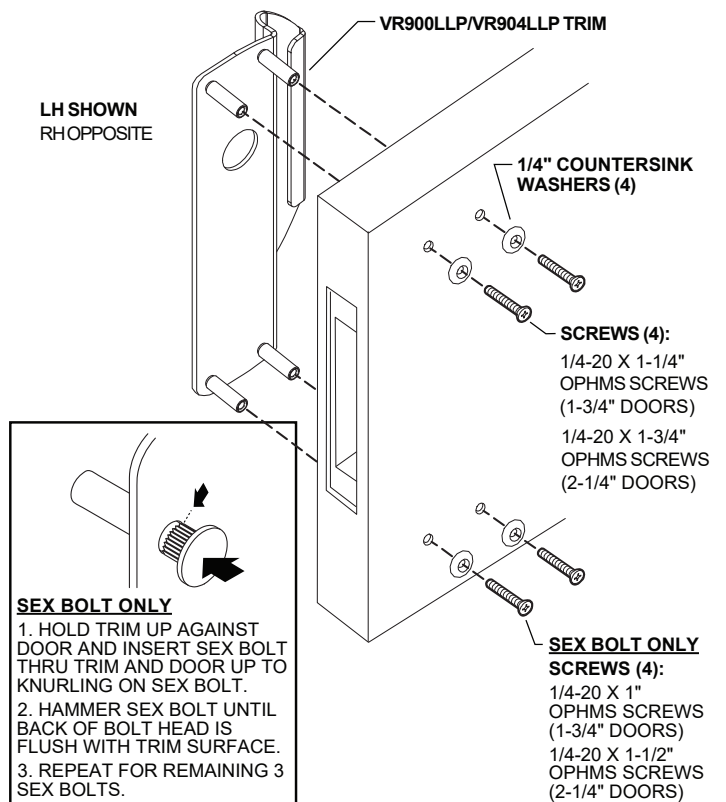

7 See mortise lock instructions for mortise lock and cylinder installation.

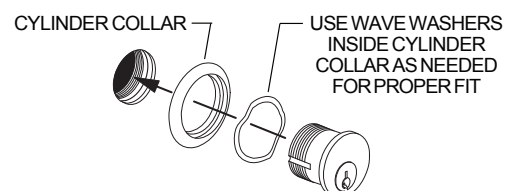

Customer Service

1-877-671-7011

www.allegion.com/us



© Allegion 2020
Printed in U.S.A.
829562-00 Rev. 09/20-d