



**TRADEMARK
HARDWARE**


WORLD OF QUALITY HARDWARE

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Phillips screwdriver, awl or pencil.

FOR DOOR APPLICATION (Illustration 1):

1. Position in desired location and mark.
2. Secure with screws provided.

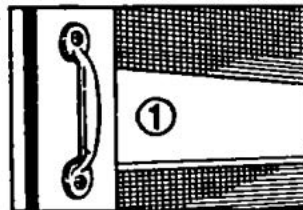

FOR DRAWER APPLICATION (Illustration 2):

1. Position in desired location and mark.
2. Secure with screws provided.

