




**TRADEMARK
HARDWARE**

WWW.TMHARDWARE.COM

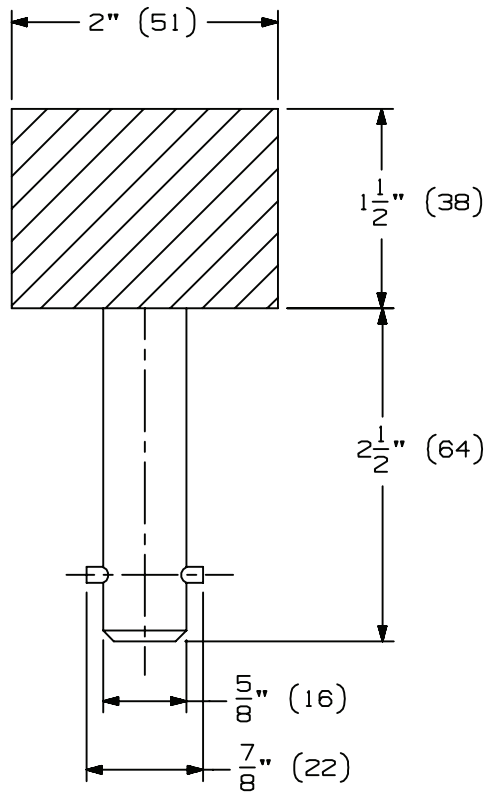

INSTRUCTIONS:

1. OPEN DOOR TO DESIRED LOCATION.
2. LOCATE MOUNTING HOLES.
3. DRILL 1" (25mm) DIAMETER BY 2-3/4" (70mm) DEEP HOLE.
4. REMOVE MATERIAL AS REQUIRED.
5. GROUT STOP INTO FLOOR*.

