



**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION INSTRUCTIONS


TOOLS REQUIRED: Drill, $\frac{1}{32}$ " drill bit, Phillips screwdriver, awl or pencil.

FOR WOOD FLOOR APPLICATION:

1. Locate stop approximately 1" in from door edge and 4" from wall.

Note: Leave enough distance to prevent door knob from striking wall.

2. Mark holes, drill and secure.

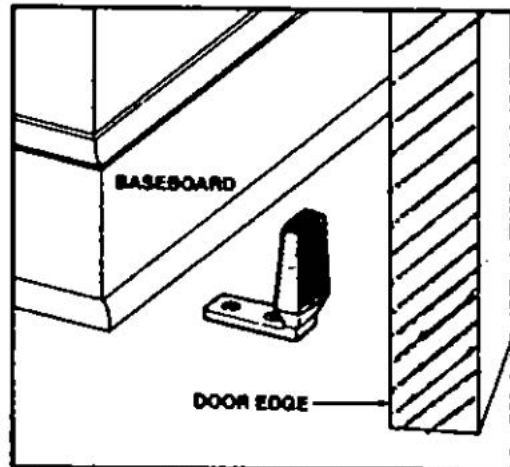

FOR CONCRETE FLOOR APPLICATION:

TOOLS REQUIRED: Drill, $\frac{5}{16}$ " carbide tip masonry bit, Phillips screwdriver, awl or pencil.

1. Follow instruction 1 above.
2. Mark holes, drill, insert plastic anchors and secure.

