




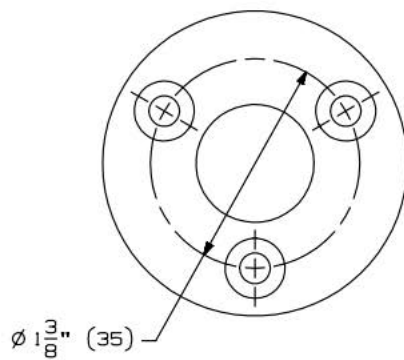


**TRADEMARK  
HARDWARE**

WORLD OF QUALITY HARDWARE

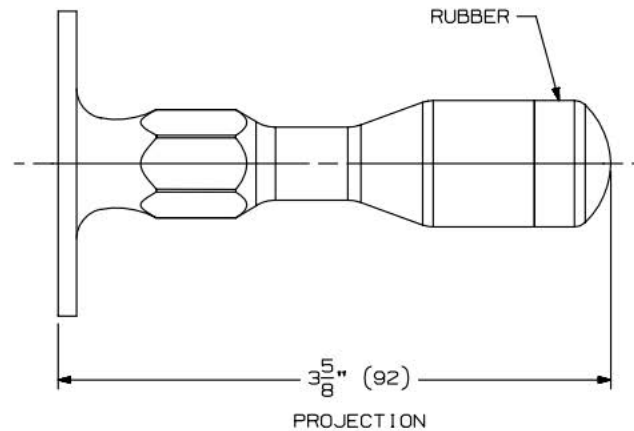

WB11

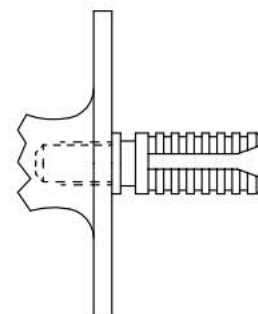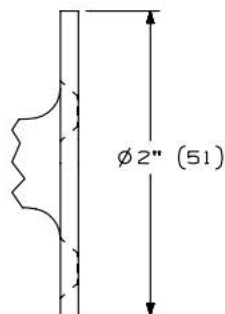

WB11X

**INSTRUCTIONS:**

1. PLACE BUMPER IN DESIRED LOCATION AND LOCATE MOUNTING HOLES.
2. PREPARE MOUNTING HOLES.
3. INSTALL BUMPER.

|       | QTY | SCREW DETAILS            |
|-------|-----|--------------------------|
| WS11  | 3   | #10 X 1" FPHSMS          |
|       | 3   | PLASTIC EXPANSION SHIELD |
| WS11X | 1   | 5/16"-18 THREAD SCREW    |
|       | 1   | LEAD EXPANSION SHIELD    |

