




TRADEMARK HARDWARE

WORLD OF QUALITY HARDWARE

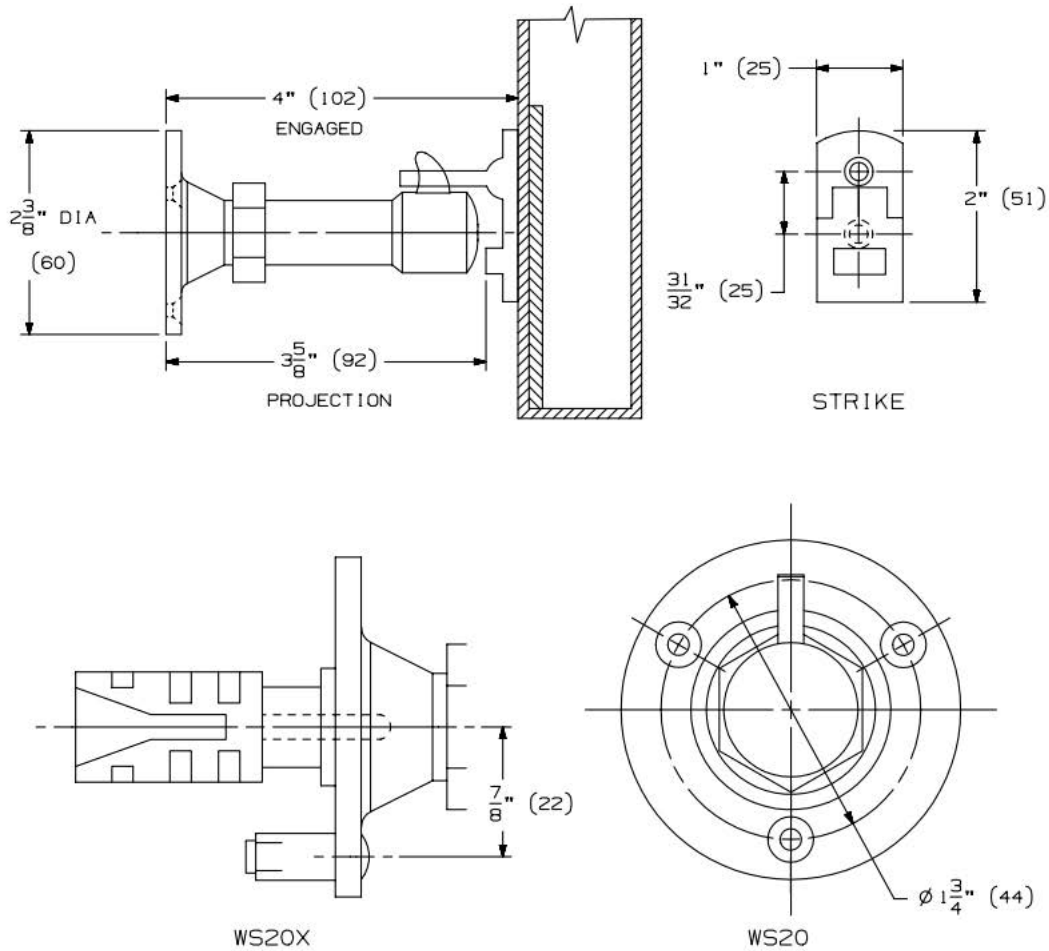

INSTRUCTIONS:

1. OPEN DOOR TO DESIRED POSITION.
2. PLACE STRIKE AND HOLDER IN DESIRED LOCATION.
3. LOCATE THE MOUNTING HOLES.
4. PREPARE MOUNTING HOLES AS NECESSARY.
5. INSTALL BODY AND STRIKE.

NOTES:

1. METAL DOORS SHOULD BE PROPERLY REINFORCED WITH 3/16\" (5) MINIMUM THICKNESS PLATE.

	QTY	SCREW DETAILS
W20 BODY	3	#10 X 1\" FPHSMS
	3	PLASTIC EXP SHIELD
W20X BODY	1	5/16\"-18 THREADED STUD
	1	LEAD EXP SHIELD
	1	#10 X 1\" FPHSMS
	1	PLASTIC EXP SHIELD
STRIKE	2	#10 X 1\" FPHSMS

