
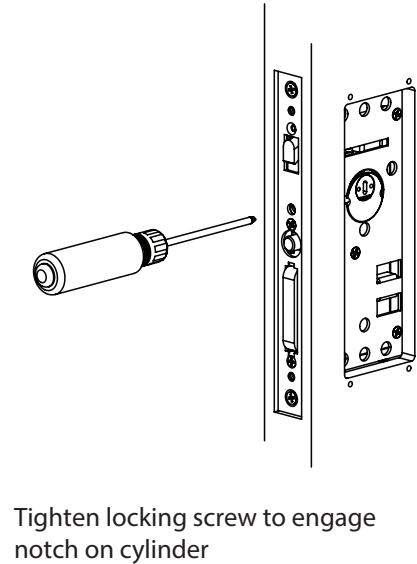
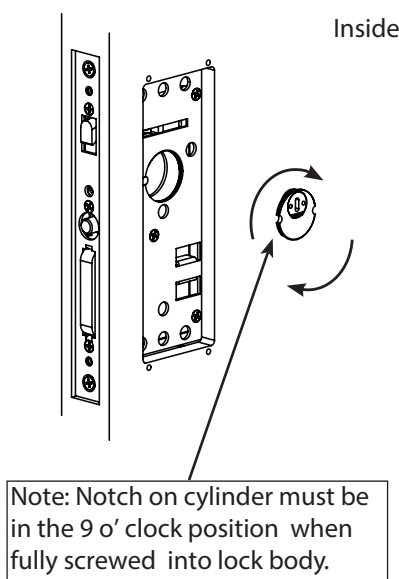



1. Install Lock Body

2. Install Drive Bar Cylinder

3. Tighten Drive Bar Cylinder

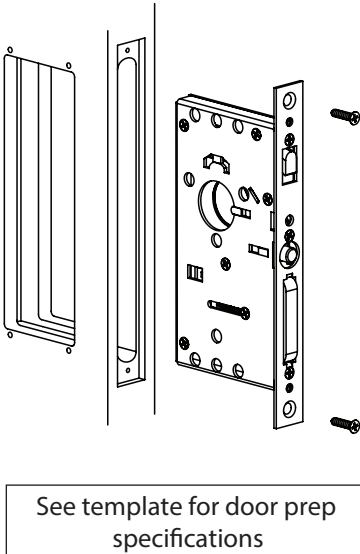


4. Mount Inside/Outside Plates

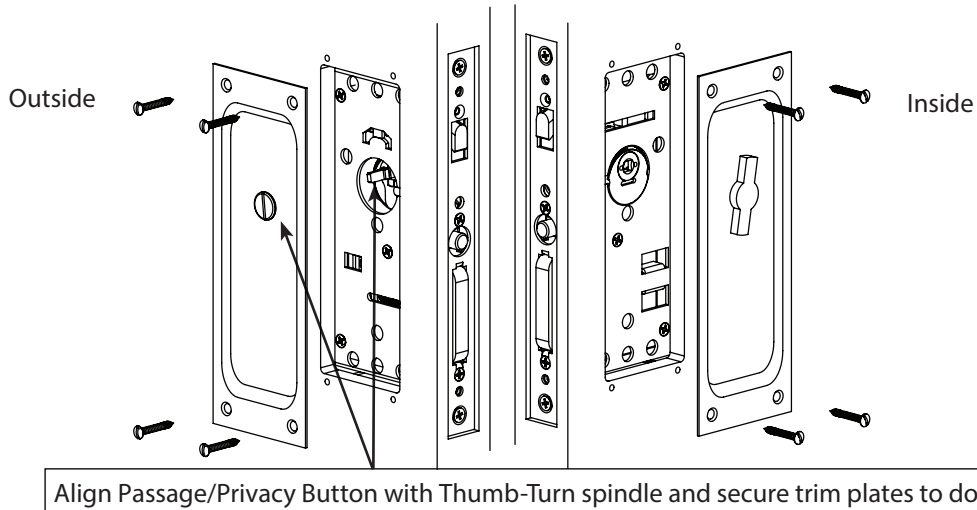

5. Install Trim Plate


6. Install Door Jamb

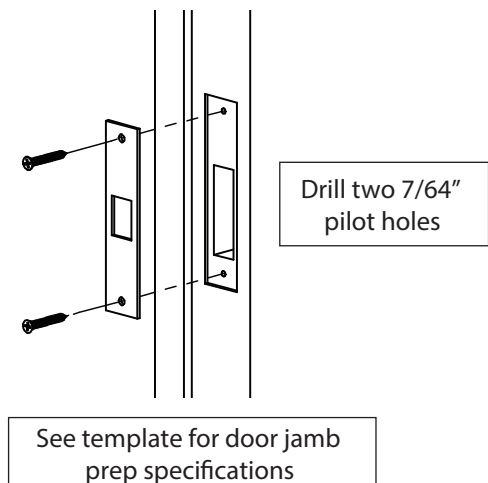


1. Install Lock Body

2. Install Drive Bar Cylinder


3. Tighten Drive Bar Cylinder

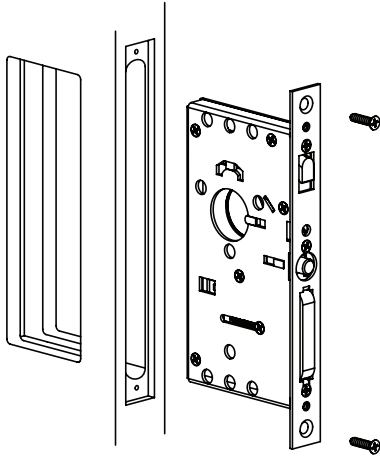

See template for door prep specifications

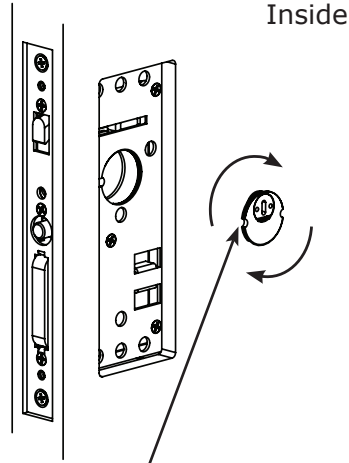


Note: Notch on cylinder must be in the 9 o'clock position when fully screwed into lock body.

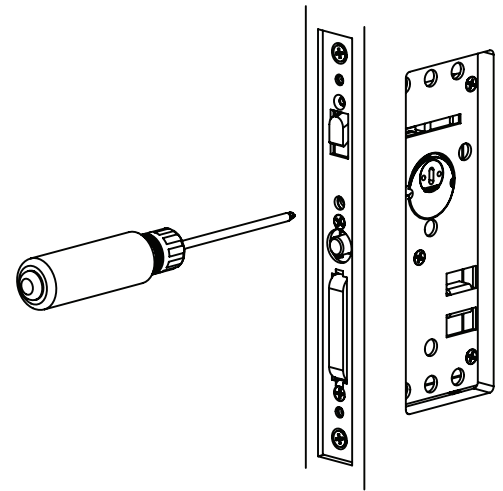

Tighten locking screw to engage notch on cylinder



4. Mount Inside/Outside Plates

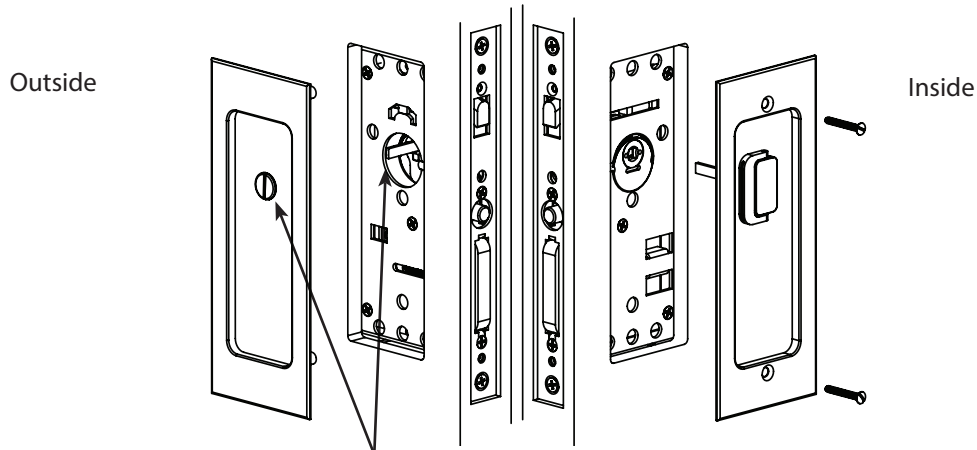

Align Passage/Privacy Button with Thumb-Turn spindle and secure trim plates to door.

5. Install Trim Plate

6. Install Door Jamb

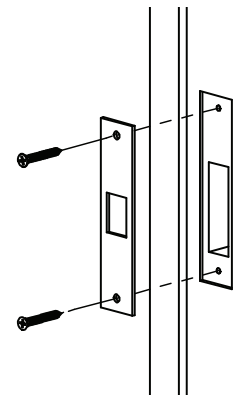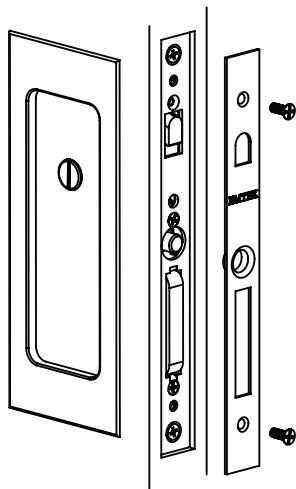

Drill two 7/64" pilot holes

See template for door jamb prep specifications