
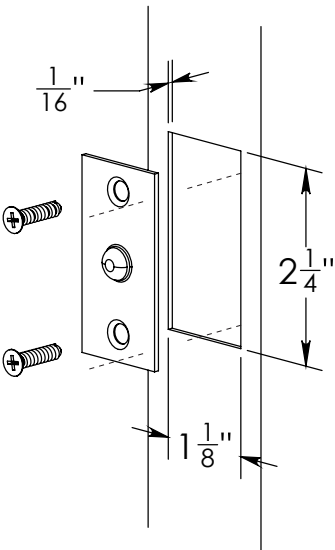




Installation Instructions
Tubular Pocket Door Lock, Passage Function

EMTEK®

1. Door Prep **2. Jamb Prep**

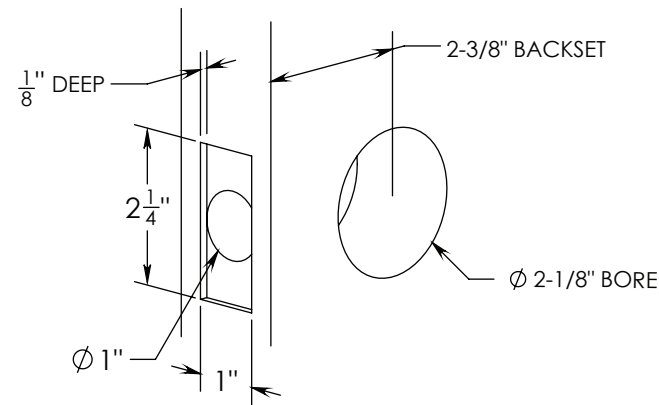

3. Install Latch **4. Install Interior and Exterior Trims**

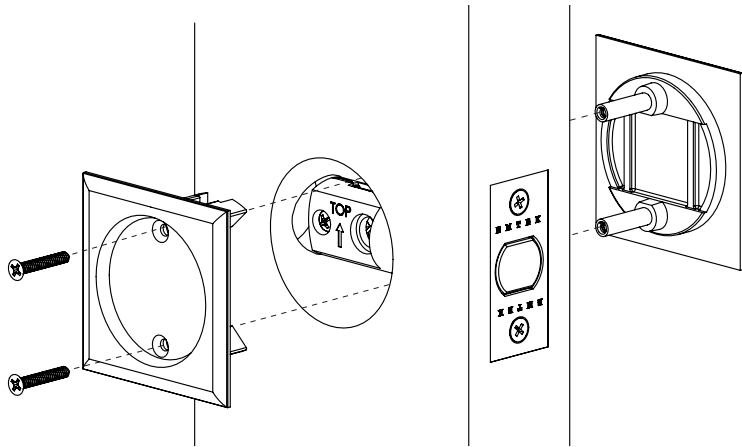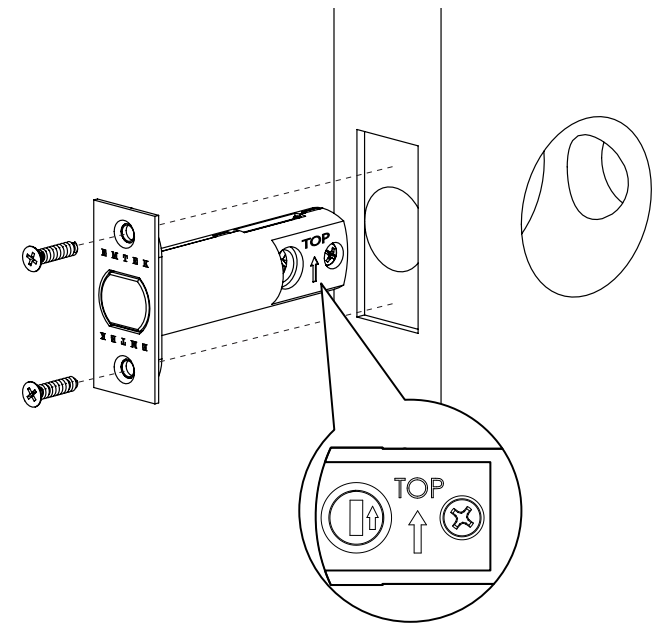

Trims vary depending
on style

