
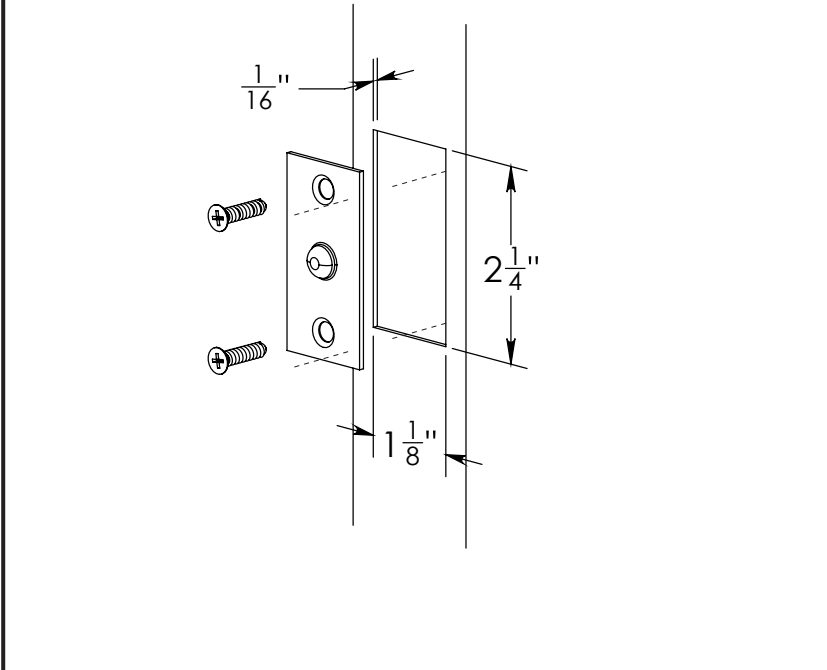




Installation Instructions
Tubular Pocket Door Lock, Passage Function

EMTEK®

1. Door Prep
2. Jamb Prep

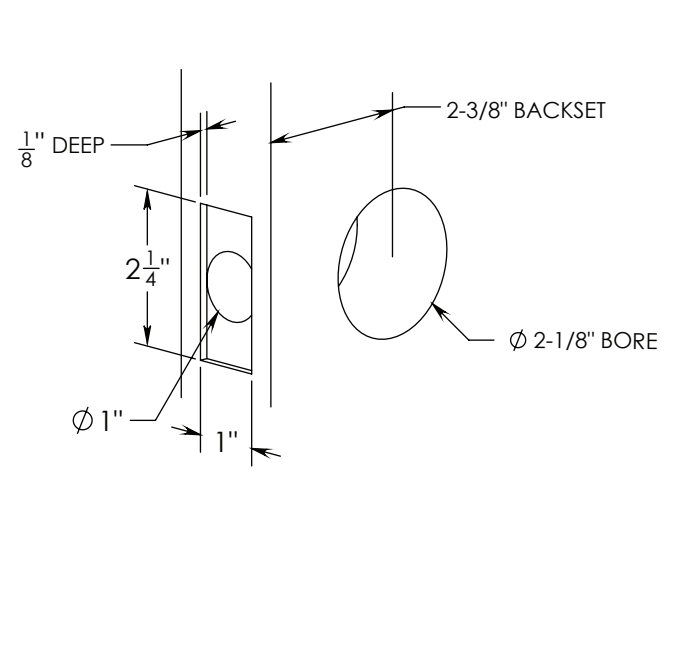

3. Install Latch
4. Install Interior and Exterior Trims

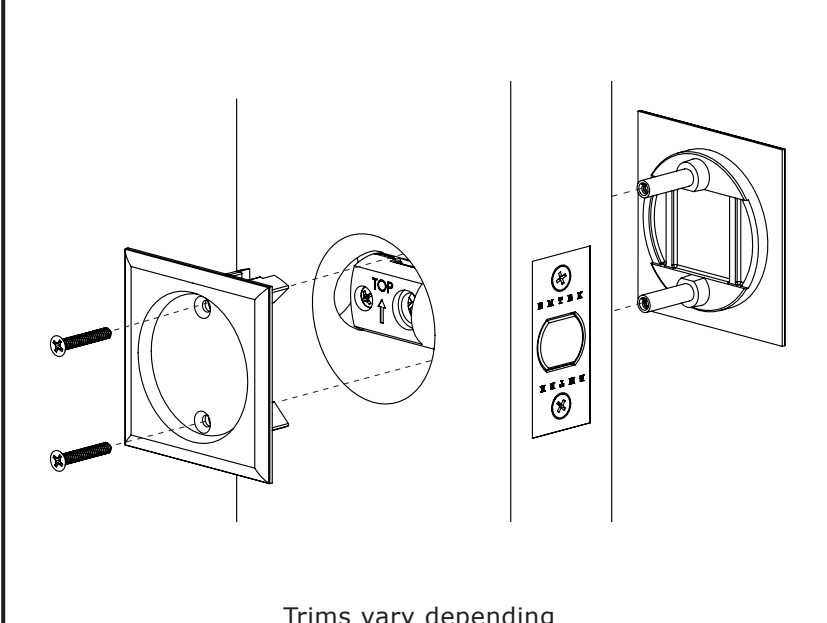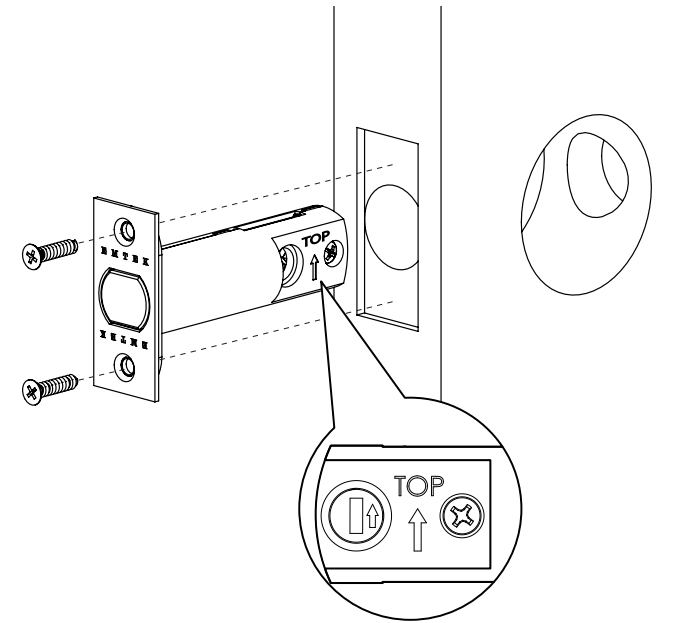

Trims vary depending
on style

