


RECESSED MOUNT KIT FOR USE WITH LED EDGE-LIT EXIT SIGNS INSTALLATION INSTRUCTIONS

Package Contents

Description	Quantity
Adjustable Bracket and Bar hanger	2
Hardware Bag	1

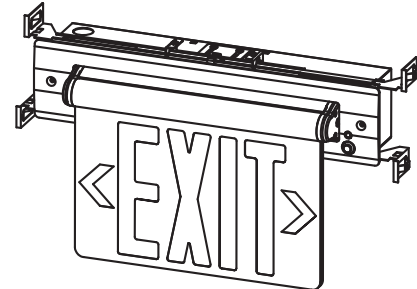


READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Review the diagrams thoroughly before beginning installation by a licensed electrician.
2. All electrical connections must meet local codes, ordinances, and the National Electric Code.
3. Before starting the installation, turn off power at the circuit breaker or by removing the appropriate fuse at the fuse box. Placing the circuit breaker in the off position is not sufficient to prevent electrical shock.
4. Do not use outdoors.
5. Do not mount near gas or electric heaters.
6. Use caution when servicing batteries. Battery acid may cause burns to skin and eyes. If acid is spilled on skin or eyes, flush with fresh water and contact a physician immediately.
7. Equipment should be mounted in locations and at heights where it will not be subjected to tampering by unauthorized personnel.
8. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
Do not use this equipment for other than its intended use.
9. All service should be performed by a licensed electrician.
10. Allow battery to charge for 24 hours before first use.

SAVE THESE INSTRUCTIONS

ELECTRICAL CONNECTIONS

- Make the proper supply wire connections.
- If using 120V, connect the black and white wires to the building utility.
- If using 277V, connect the orange and white wires to the building utility.
- Cap off unused wires. In all cases, use standard wire nuts in connection to wires.

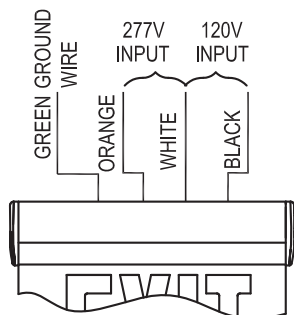

DETERMINE DIRECTION

- If indicator is needed, keep indicator and remove instruction film.
- If no indicator is needed, remove indicator and instruction film together.




Mounting Instructions


NOTE: First turn off electricity.

Recessed Ceiling Mounting


1. Refer to assembly drawing before you start installation.
2. Use screwdriver open front cover and connect battery connector .

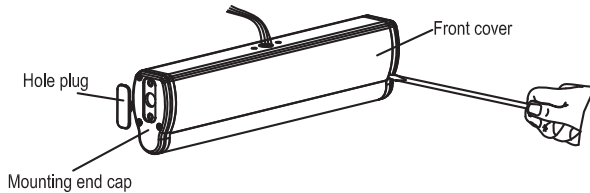


3. Position recessed kits and bar hangers between joists. Make sure bar hangers are hanged in the correct position. Place recessed kits temporarily by hammering "nail-in" tabs on bar hangers, then secure permanently with nails. Bar hangers should be leveled with bottom of joists.
4. Adjust height of recessed kits vertically using adjusting slots and then tightening all screws on adjusting slots and bar hanger bracket in order to secure adjusting bracket and bar hangers.

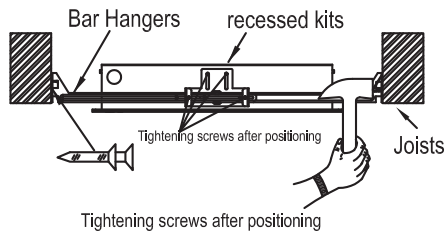


5. Make proper electrical connections at J-box in the metal box or at junction box in the ceiling of building. When using 120VAC, connect black and white leads to the building utility. When using 277VAC, connect orange and white leads to the building utility . Cap off unused wire. Use standard wire nuts for wire connection.

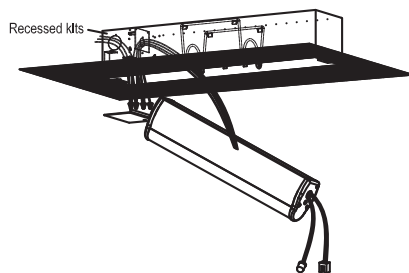

6. Connect test switch and LED indicator cables via connectors.
7. Secure trim plate by using provided screws.

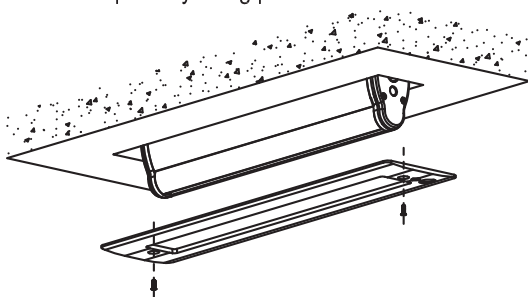


8. Insert EXIT panel into main body assembly gently. If EXIT panel is for single face, make sure EXIT letter direction is positioned correctly.

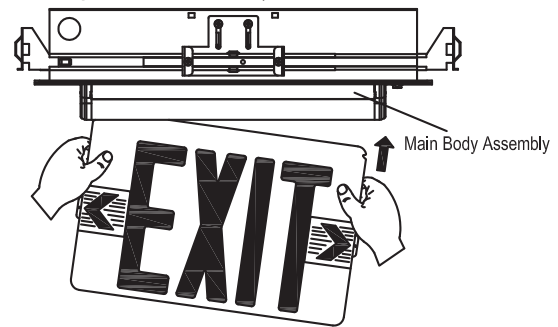

9. Determine direction for chevron placement. (See DETERMINE DIRECTION)
10. The unit can be installed on any surface, you may rotate the EXIT panel in any angle from 0° to 180°

Recessed Wall Mounting

1. Reference 1 - 10 step for recessed wall mounting.
2. Rotate 90° for recessed wall mounting.

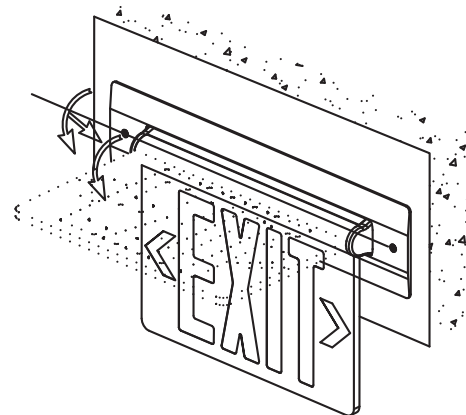

Assembly Drawing

