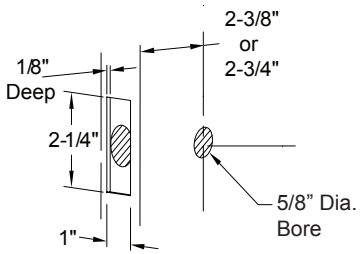
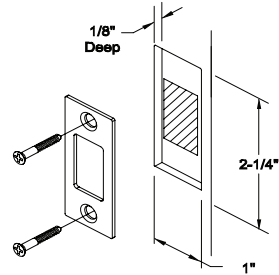
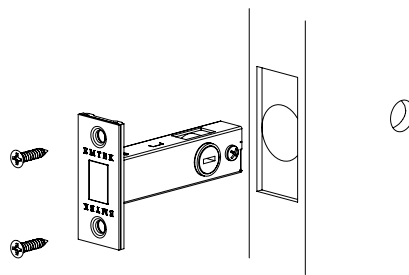
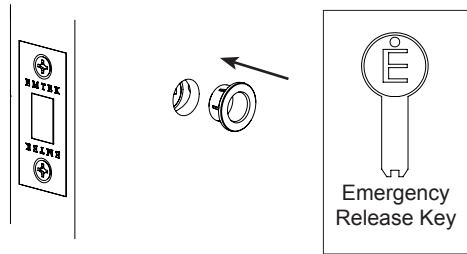
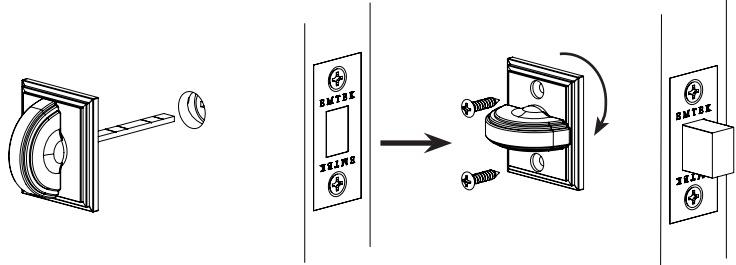




## Installation Guide for Mix Match Thumbturn Privacy Bolts

| 1. Door Prep                                                                      | 2. Door Jamb                                                                      | 3. Install Latch                                                                    |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |



### Installation for Single Rosette Configuration

| A. Install Exterior Bushing                                                                                                        | B. Install Interior trim                                                                                                                                                                  |
|------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>Optional: Adhesive may be used if desired</p> |  <p>To ensure thumbturn rotates smoothly, test the tailpiece alignment before mounting wood screws.</p> |

### Installation for Double Rosette Configuration
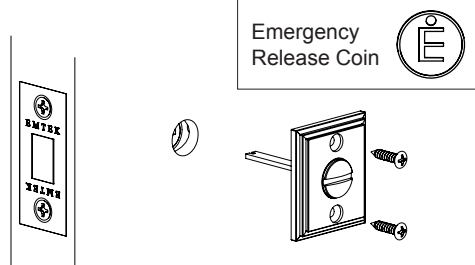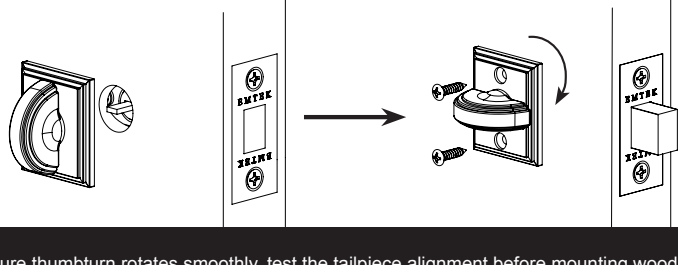
| A. Install exterior trim                                                            | B. Install Interior Trim                                                                                                                                                                    |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  <p>To ensure thumbturn rotates smoothly, test the tailpiece alignment before mounting wood screws.</p> |

### Installation for Double Rosette Configuration with Occupancy Indicator
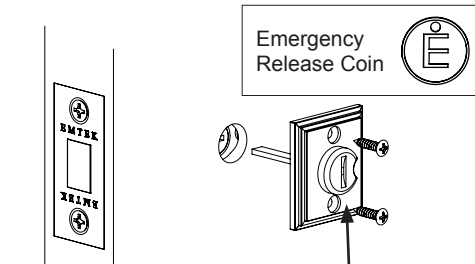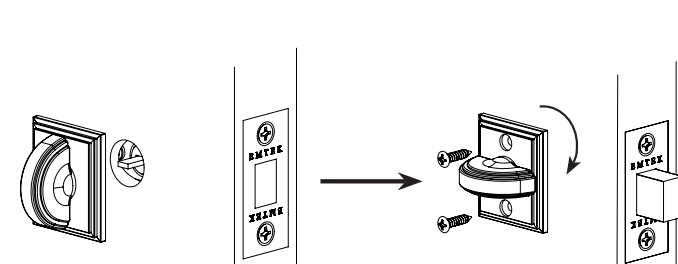
| A. Install exterior trim                                                                                                                                                           | B. Install Interior Trim                                                                                                                                                                    |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>Install with the green color visible and orientated towards the hinge side of the door.</p> |  <p>To ensure thumbturn rotates smoothly, test the tailpiece alignment before mounting wood screws.</p> |