
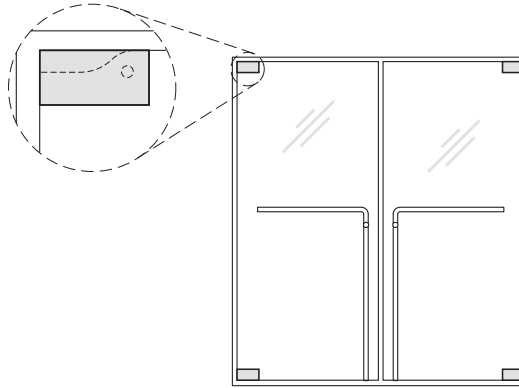


PFD-20 & PFD-22 Top Patch Fitting Glass Fabrication Sketch

For installation instructions please visit our website www.assaabloyglass.us

DIMENSIONS IN INCHES (MILLIMETERS) NOT TO SCALE

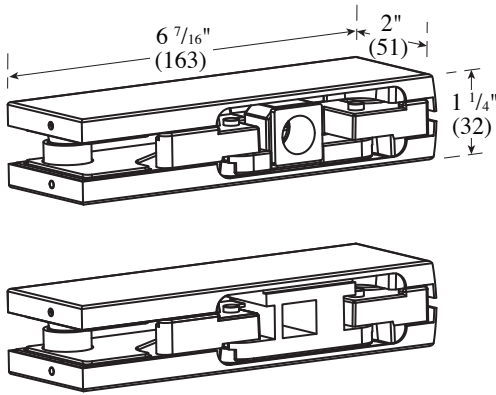


PFD-20/22 Fabrication Sketch

Effective date:
June 2, 2017

Supersedes: All Previous
ASSA ABLOY Glass Door
Patch Fitting products
conform to ANSI/BHMA
156.7.

USE FABRICATION SKETCH TO DRILL AND CUT GLASS.

Cut away glass (shaded area) along dotted line to match sketch dimensions. Drill $\frac{13}{16}$ " (20 mm) diameter hole.

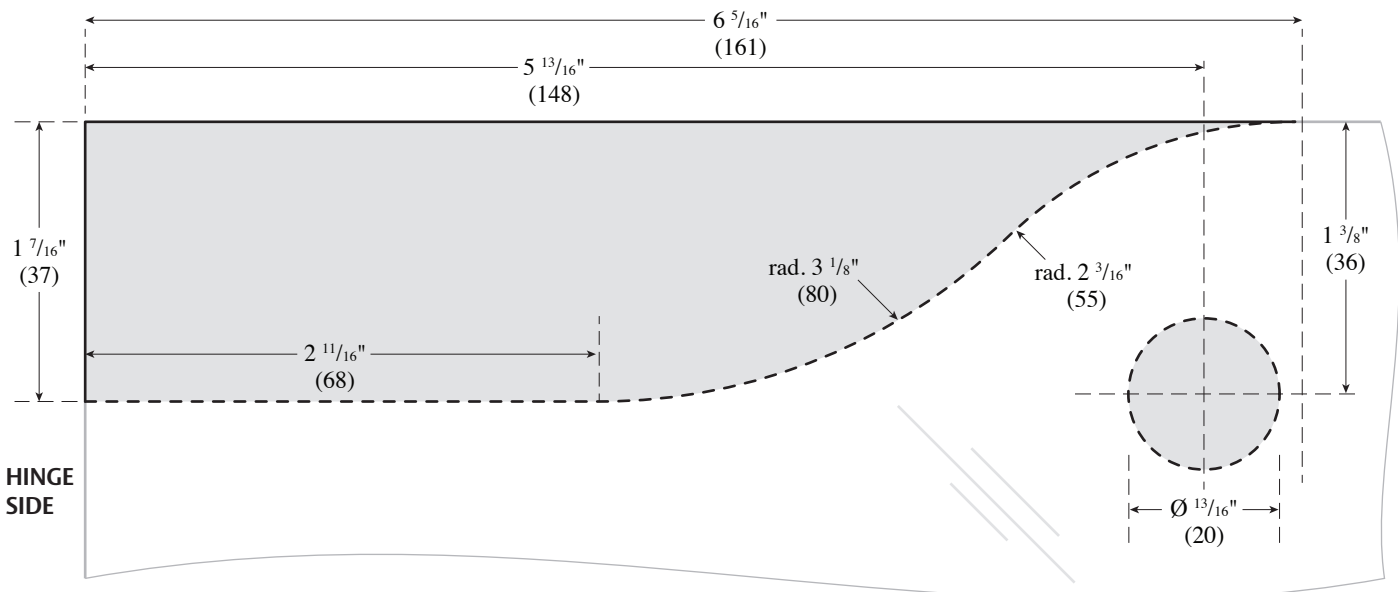

Caution: Office copiers, printers and facsimile machines may change the size of a drawing and make it inaccurate to use as a template.