## PFT-60 SideLite Transom Patch w/Stop Glass Fabrication Sketch





## **ASSA ABLOY**

The global leader in door opening solutions

For installation instructions please visit our website www.assaabloyglass.us

## DIMENSIONS IN INCHES (MILLIMETERS) NOT TO SCALE

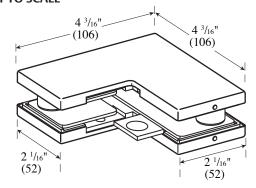

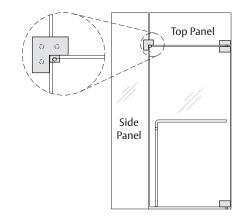


**PFT-60**Fabrication Sketch

Effective date: June 2, 2017

Supercedes: All Previous

ASSA ABLOY Glass Door Patch Fitting products conform to ANSI/BHMA 156.7.

USE FABRICATION SKETCH TO DRILL GLASS. Drill three <sup>13</sup>/<sub>16</sub>" (20 mm) diameter holes.

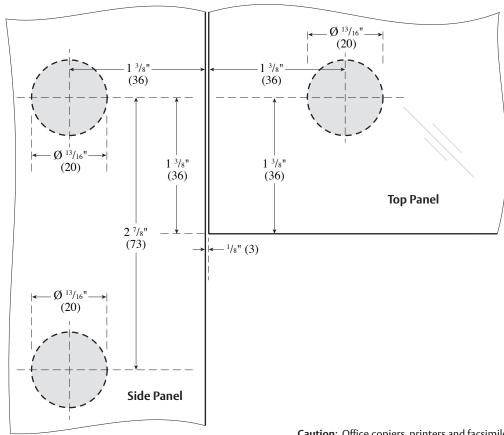

**Caution**: Office copiers, printers and facsimile machines may change the size of a drawing and make it inaccurate to use as a template.







845-388-1388



sales@tmhardware.com