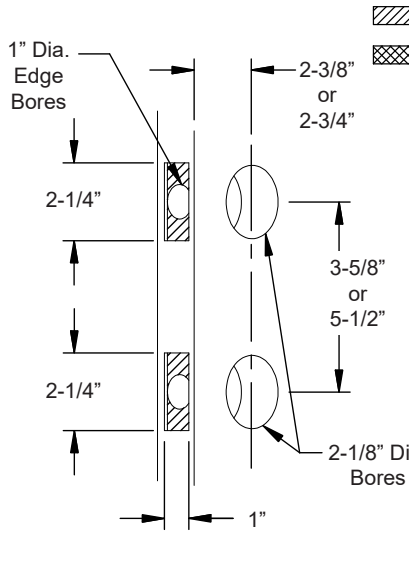
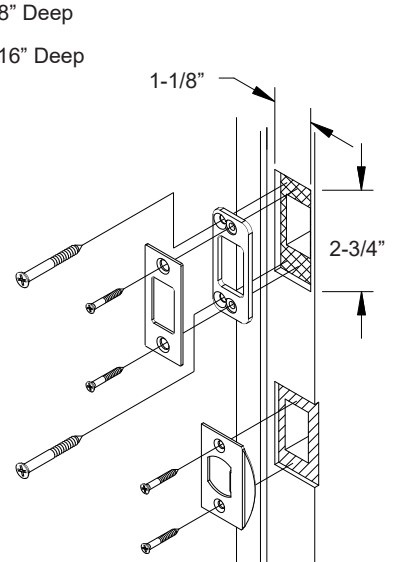
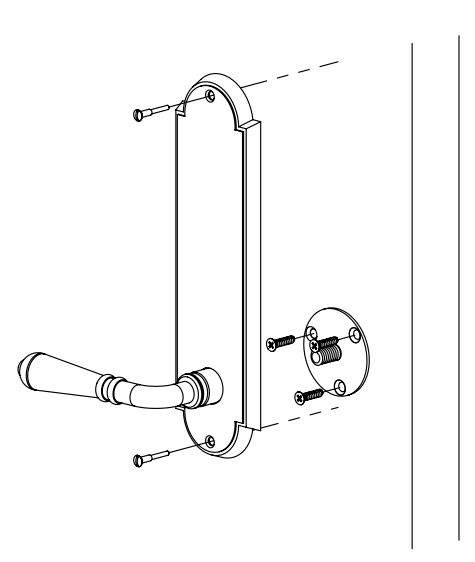
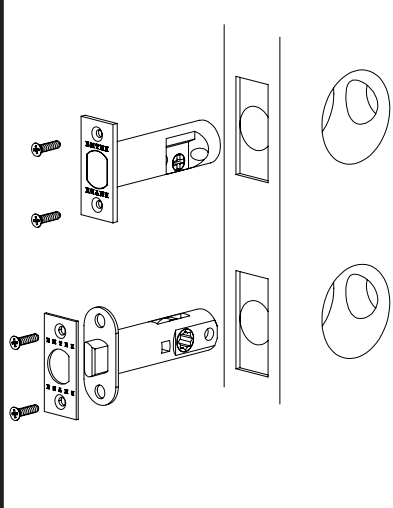
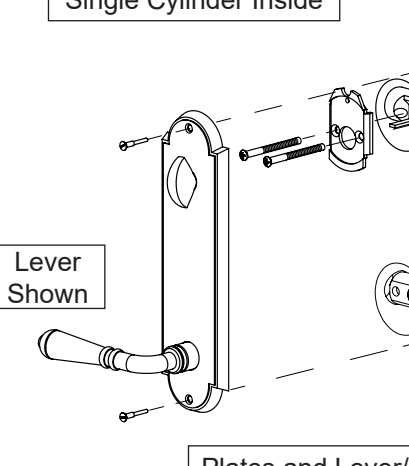
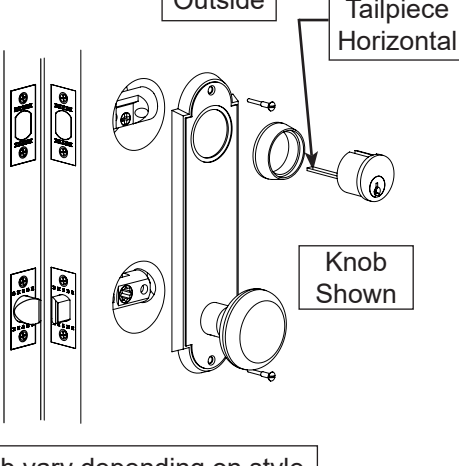
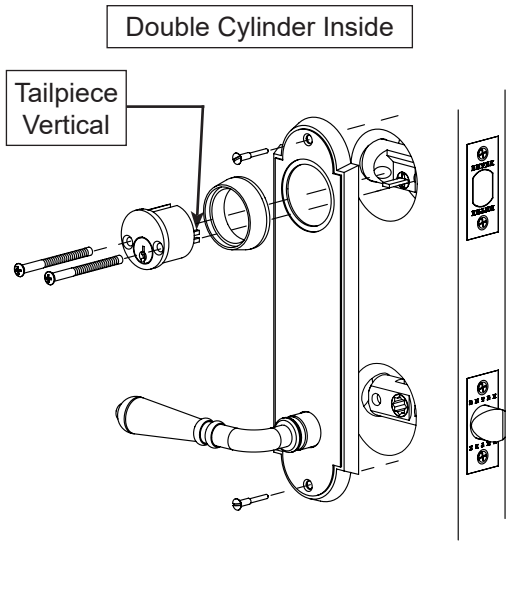
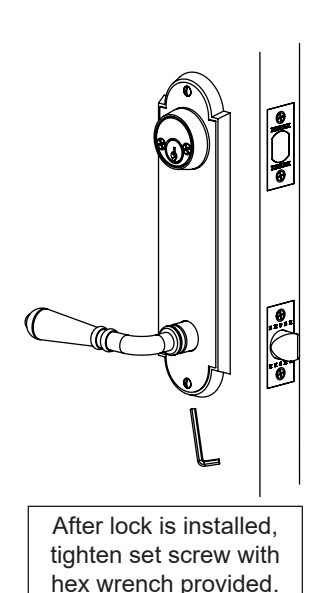


1. Door Prep	2. Door Jamb Prep	Dummy Function
 1" Dia. Edge Bores 2-1/4" 2-1/4" 2-1/4" 2-3/8" or 2-3/4" 3-5/8" or 5-1/2" 2-1/8" Dia. Bores 1" 1/8" Deep 3/16" Deep	 1-1/8" 2-3/4"	
3. Install Bolt and Latch	4. Install Outside Trim Plate	
	Single Cylinder Inside  Lever Shown Outside  Tailpiece Horizontal Knob Shown Plates and Lever/Knob vary depending on style	
5. Install Inside Trim Plate	6. Secure Lever/Knob	Optional Thru Bolts
Double Cylinder Inside  Tailpiece Vertical	 After lock is installed, tighten set screw with hex wrench provided.	Optional Thru Bolts Thru bolts (provided) may be used on hollow doors instead of wood screws (also provided). 