


## Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. For door reinforcement see template 7400-0000.
6. Prepare mounting holes when installing the trim.
7. Provide adequate internal support to prevent door deformation after trim is bolted to the door.
8. ANSI/BHMA A156.115, which cover hardware preparations for steel doors and steel frames, and A156.115-W, which cover hardware preparations for wood doors with wood or steel frames.
9. Dimensions given about a centerline are symmetrical.
10. Omit for 449F.

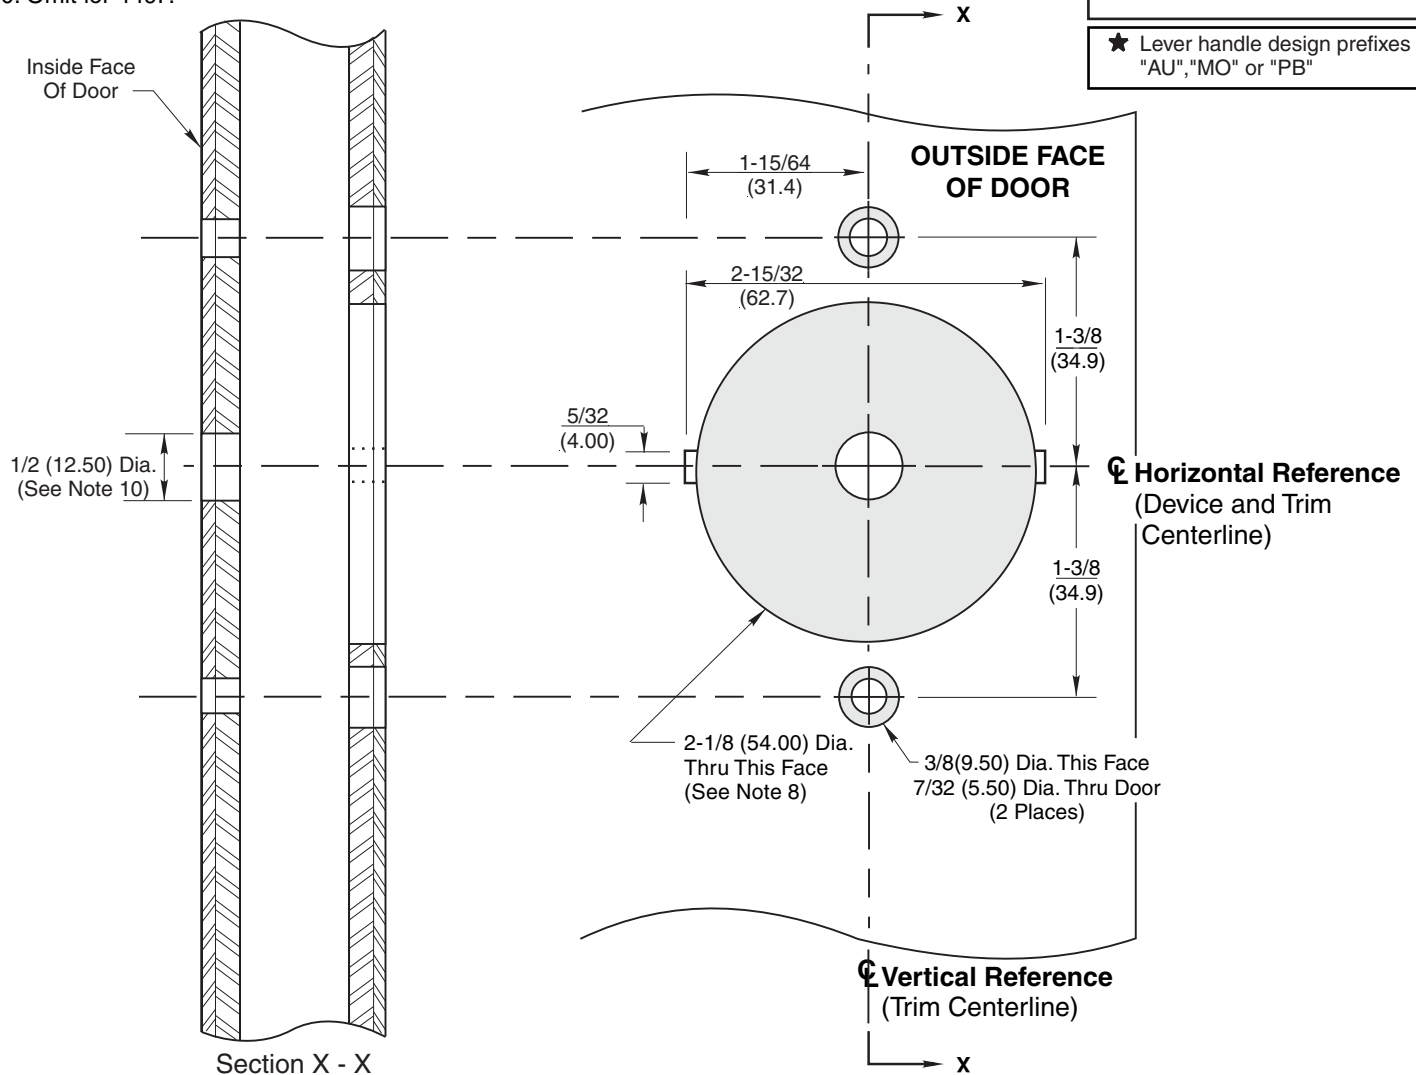

**441F, 446F, 448F and 449F Trim**  
**With 2100(F), 6100(F), 6170(F) or 1800(F) Series**  
**Rim and Vertical Rod Exit Devices**  
**Metal Door Preparation**



1-800-438-1951  
[www.yalelocks.com](http://www.yalelocks.com)

TEMPLATE NUMBER

**7400-0441**

DATE

**06-15**