
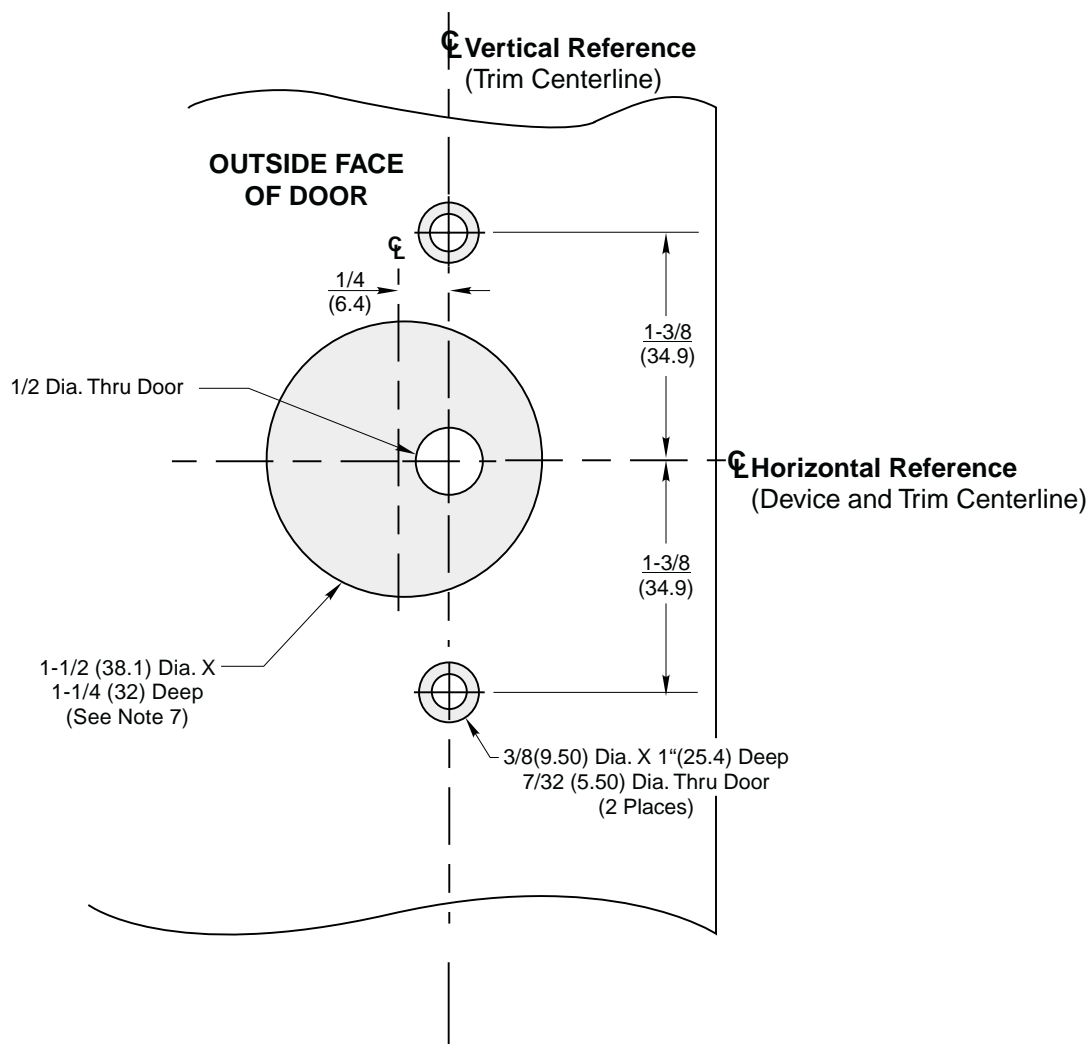


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Prepare mounting holes when installing trim.
6. Provide adequate internal support to maintain door integrity during operation.
7. At specifier's option, stock door with ANSI A115.W2 cutout may be substituted. These doors require a filler plate for the door edge cutout (by others).

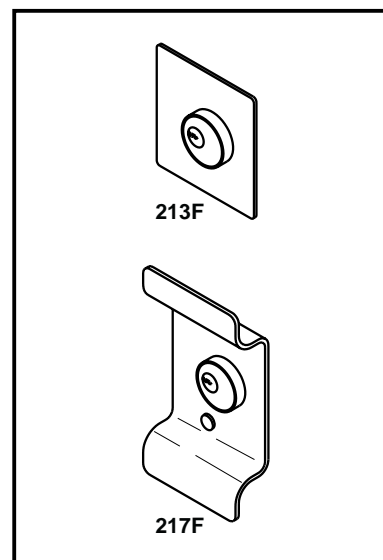

213F and 217F Trim
 With 2100(F) Series Rim and Vertical Rod Exit Devices
Wood or Composite Door

Yale®**Yale Commercial Locks and Hardware**

www.yalecommercial.com

TEMPLATE NUMBER

7400-1213

DATE

8-99