
DO NOT SCALE

355LN-D or 455LN-D – Full Dummy Trim Through Bolted

355LN or 455LN - Half Dummy Trim Through Bolted

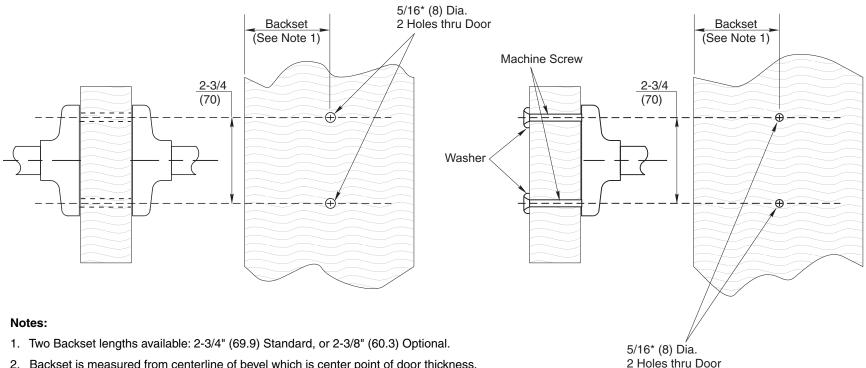

- 2. Backset is measured from centerline of bevel which is center point of door thickness.
- 3. Dimensions marked with * have tolerances of +1/32, -0.
- 4. All dimensions given in inches (mm).
- 5. 5300LN rose shown for illustration purposes only.

5300LN or 5400LN Series Lever Handle Cylindrical Locks **Through Bolted Dummy Trim Door Preparation** 2-3/4" and Optional Backsets



An ASSA ABLOY Group brand

www.yalecommercial.com

TEMPLATE NUMBER 7150-0068

5-08