


Notes:

1. Do not scale drawing.
2. For strike preparation refer to:
495 Strike - Template No. 7102-0005
497 Strike - Template No. 7102-0003
3. H.M. door manufacturer must provide supports within the door to keep the door from collapsing when lock is installed.
4. All dimensions given in inches (mm).

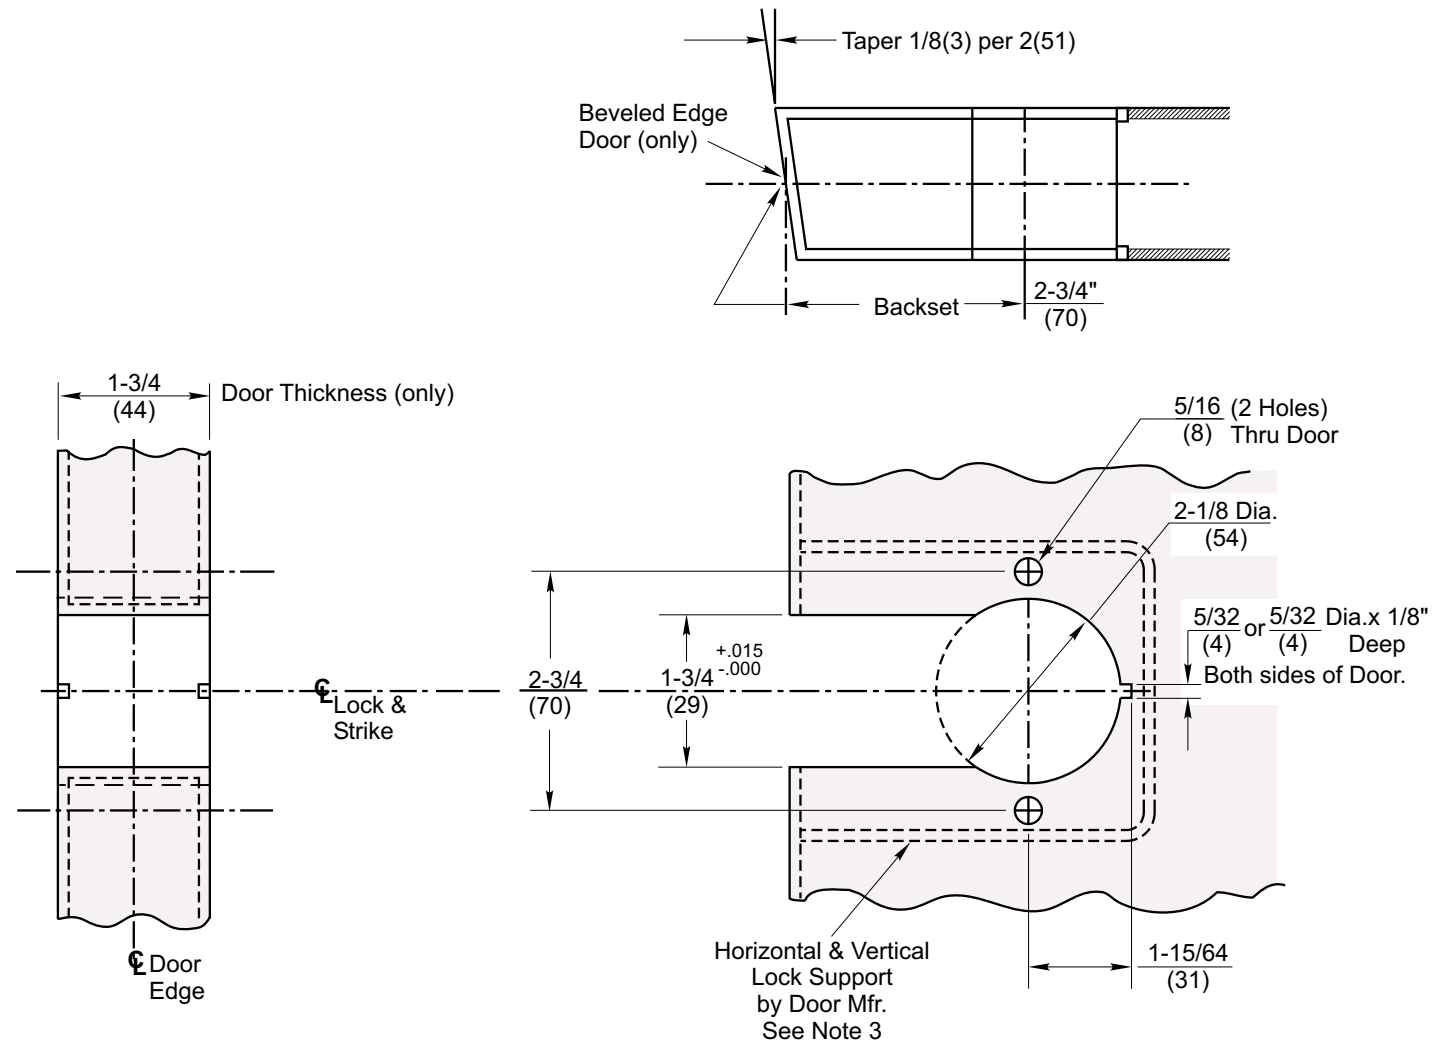

6400LN Series Mono Lock Retrofit Lockset
Wood or H.M. Door Preparation
(Modified ANSI A115.6)

Yale

Yale Commercial Locks and Hardware

www.yalecommercial.com

TEMPLATE NUMBER

7150-2001

DATE

11-97