

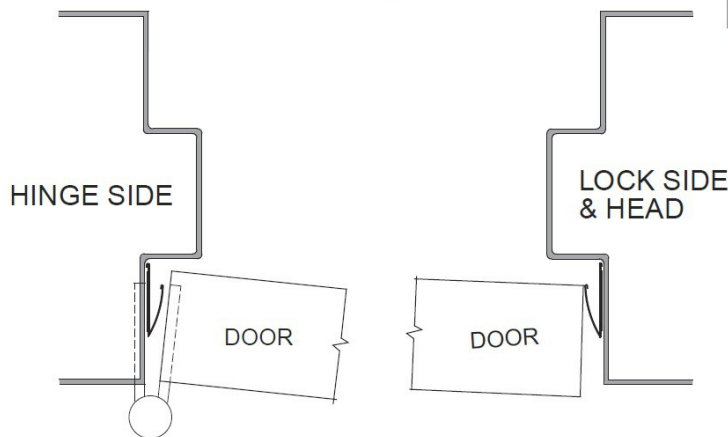


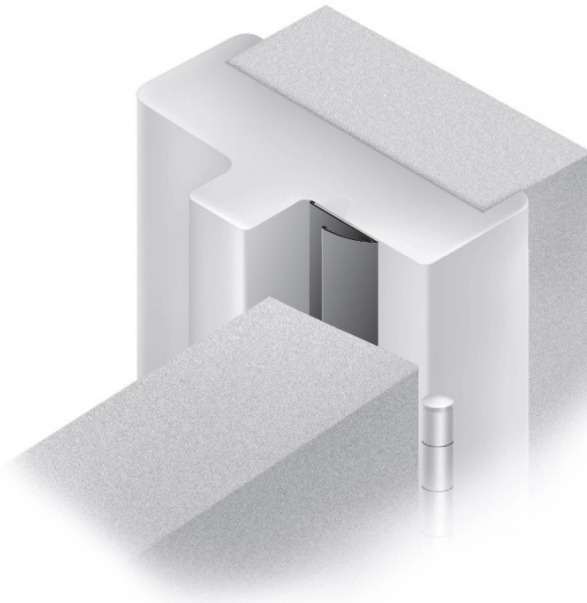

**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION GUIDE

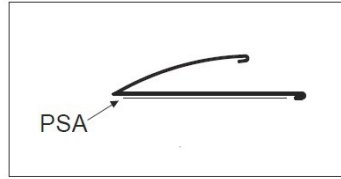

Before Installation:

- 1 Thoroughly clean the surface of the frame where gasketing is to be applied (see drawings). Use either a solvent cleaner (such as mineral spirit) or a common detergent cleaner. Make sure to check for any impediments (dust, dirt, oil, grease, loose paint, etc.) and remove them from the surface area.
- 2 Allow surface area to dry COMPLETELY before beginning installation.
- 3 Recommendation: Finish-paint doors and frames and allow the paint to dry before installing the gasketing.

To Install:

- 1 Install the head piece first along the entire length of the head. Measure and cut the gasketing to size and place properly, referring to drawings for location on the head. Remove the paper backing from the self-adhesive strip (PSA), align on the head and press firmly into place.
- 2 Install the strike jamb gasketing next, following procedures as outlined in step 1. (Refer to drawing for placement on the strike jamb).
- 3 Install the hinge jamb gasketing last, following procedures as outlined in step 1. (Refer to drawing for placement on the hinge jamb).



Customer Service

1-877-671-7011

www.allegion.com/us

© Allegion 2016
Printed in U.S.A.
47255377 Rev. 11/16-b



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com