




**Trademark
HARDWARE**

INSTALLATION GUIDE


Installation Instructions:

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops. Position threshold so that seal contacts face of door along entire width when door is closed (see above illustration).
3. Peel and stick PK381 gasket from jamb to jamb on threshold and door stops.
4. Drill pilot holes in floor through pre-drilled holes in threshold.
5. Caulk ends of threshold, and under full length of legs (important for effective sealing and moisture control).
6. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)

Top (plan) view of door opening (out-swing type)

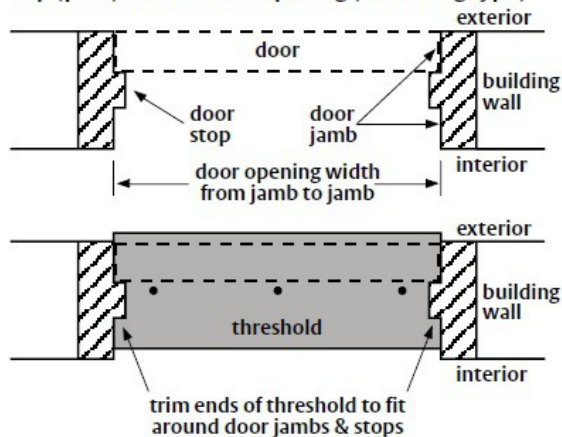

Tools Required:

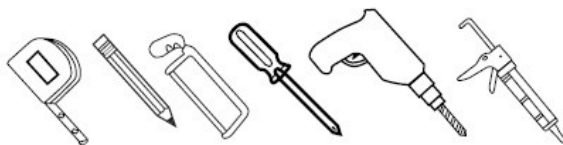

**Trademark
HARDWARE**

148 Horton Drive, Suite B
Monsey, NY 10952

Phone: 845-388-1300
Fax: 845-388-1388

www.TMHardware.com
sales@tmhardware.com