




**Trademark
HARDWARE**

INSTALLATION GUIDE

Tools Required:

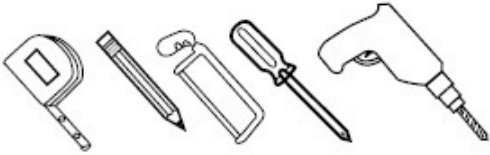

Installation Instructions:

1. Trim piece (335_R) to fit head and lock side jamb and door at hinge side.
2. Trim "L" shaped piece (336) to fit door at head and lock side and stop at hinge side.
3. Fasten part to door and jamb with screws provided.
4. Adjust for fit and proper door opening and closing.