




**Trademark
HARDWARE**

INSTALLATION GUIDE

Rain Drip Projection Strip

Tools Required:

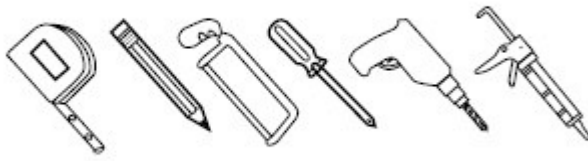

Installation Instructions:

1. Install on frame over door.
2. Length should be equal to door width, plus 4" (2" each side).
3. Fasten with screws provided.
4. Be sure top of door clears raindrip when opened or closed.