



**Trademark  
HARDWARE**

# INSTALLATION GUIDE


## Residential Spring Loaded Automatic Door Bottom

### *Tools Required:*



### *Installation Instructions:*

1. Measure, mark, and trim door bottom sweep to fit width of door, allowing clearance between the two stops.
2. Close door and secure door bottom sweep to outside bottom edge of door with supplied screws. Top of door bottom sweep should be 2-1/2" above threshold (or floor).
3. With door closed, depress and hold sweep in closed (down) position. With supplied screw, attach nylon cam to door stop on latch side of door opening. Cam should be 1-3/8" above threshold and up against the sweep. When door is closed, the cam will hold the sweep in closed (down) position.
4. When door is opened, the sweep flips up to allow clearance over carpet.

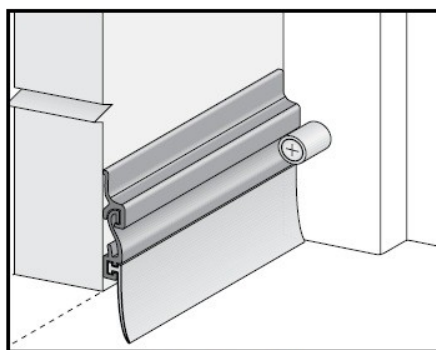

405\_V - Installed