



**Trademark  
HARDWARE**

# INSTALLATION GUIDE

## Automatic Door Bottom

### End Plate Installation Instructions:

PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING TO INSTALL END PLATES.

1. The automatic door bottom must be correctly installed and adjusted in accordance with the installation instructions furnished with this product (see other side).
2. Be sure that the drop bar (part that contains the seal) does not project beyond the end of the case when the actuation plunger is depressed (as shown in Figure 5). If it does project beyond the case, it was improperly trimmed in the field. This condition can be corrected by removing the unit and trimming the excess.

**NOTE:** Under no condition should the insert project beyond the edge of the case.



Drop Bar

**Figure 5 - Improper Drop Bar**

This shows an improper drop bar protruding from the end of the case. The drop bar should be flush at both ends.

3. Install end plate (as shown in Figure 6) on end opposite plunger using the supplied screws. End plate "This Side In" sticker should be facing the Automatic Door Bottom and the Pemko Logo should be visible and facing outwards.




End Plate

**Figure 6 - Properly Installed End Plate**

This shows a properly installed end plate. Do not use power tool to tighten screw.

4. Next insert the plunger end plate with the hexagon hole. It serves to prevent the plunger from rotating and changing adjustment (as shown in Figure 7). This end plate may need to be removed for readjustment. Secure the end plate using the supplied screws. End plate "This Side In" sticker should be facing the Automatic Door Bottom and the Pemko Logo should be visible and facing outwards.

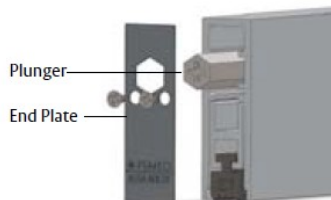

Plunger

End Plate

**Figure 7**

Plunger end plate prevents the plunger adjustment from rotating.