



STEP 1

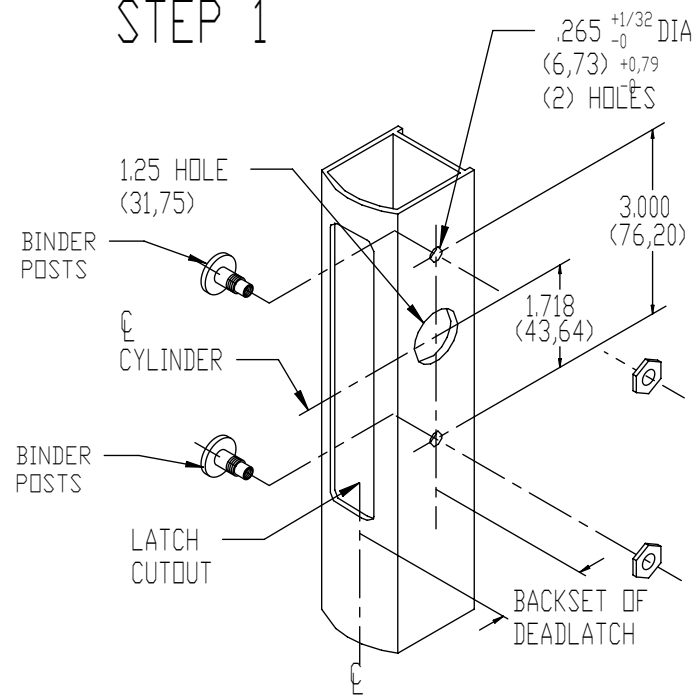

- 1.PREPARE STILE AS SHOWN.
- 2.INSERT BINDER POST THRU .265 DIA. HOLE IN STILE.
- 3.SECURE BINDER POST WITH 1/4-28 NUT.
(CAUTION: DO NOT OVERTIGHTEN NUT)


STEP 2

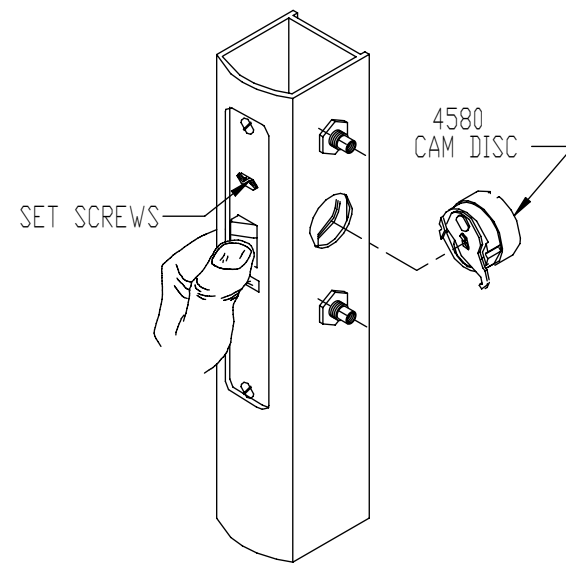

- 1.INSTALL 4500, 4700 AND 4900 SERIES DEADLATCH PER MOUNTING INSTRUCTIONS.
- 2.INSTALL 4580 CAM DISC ASSY. SECURE WITH SETSCREW.


INSTALLATION

STEP 3

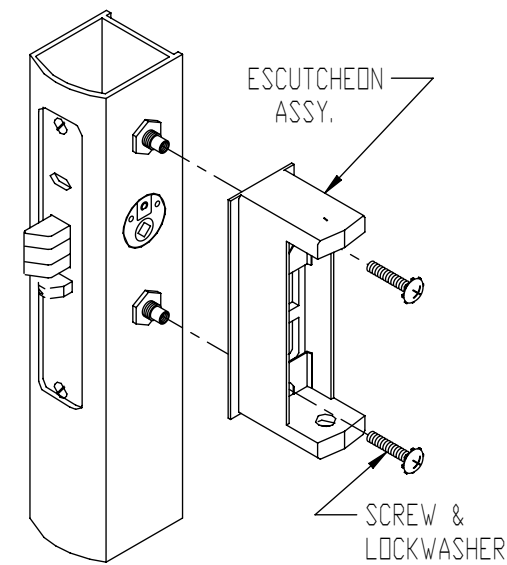


- 1.INSTALL ESCUTCHEON ASSY.
- 2.USING 8-32 SCREWS W/LOCKWASHER, SECURE ESCUTCHEON ASSY. TO BINDER POST.
IMPORTANT,
TIGHTEN THESE SCREWS SECURELY.

STEP 4

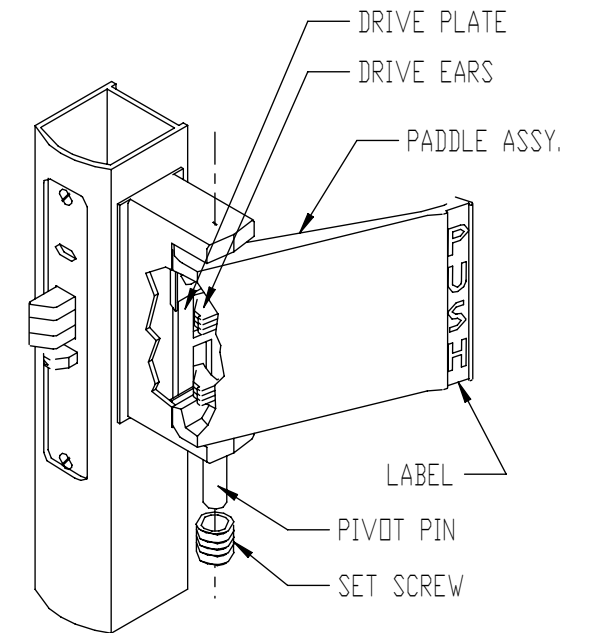


- 1.INSTALL PADDLE ASSY. ALIGN DRIVE EARS ON PADDLE WITH SLOT IN DRIVE PLATE.
- 2.INSTALL PIVOT PIN.
- 3.INSTALL PIVOT PIN SET SCREW. TIGHTEN SET SCREW FLUSH WITH BOTTOM OF ESCUTCHEON.

INSTRUCTIONS FOR CHANGING HAND SEE REVERSE FOR CAM DISC ASSY.

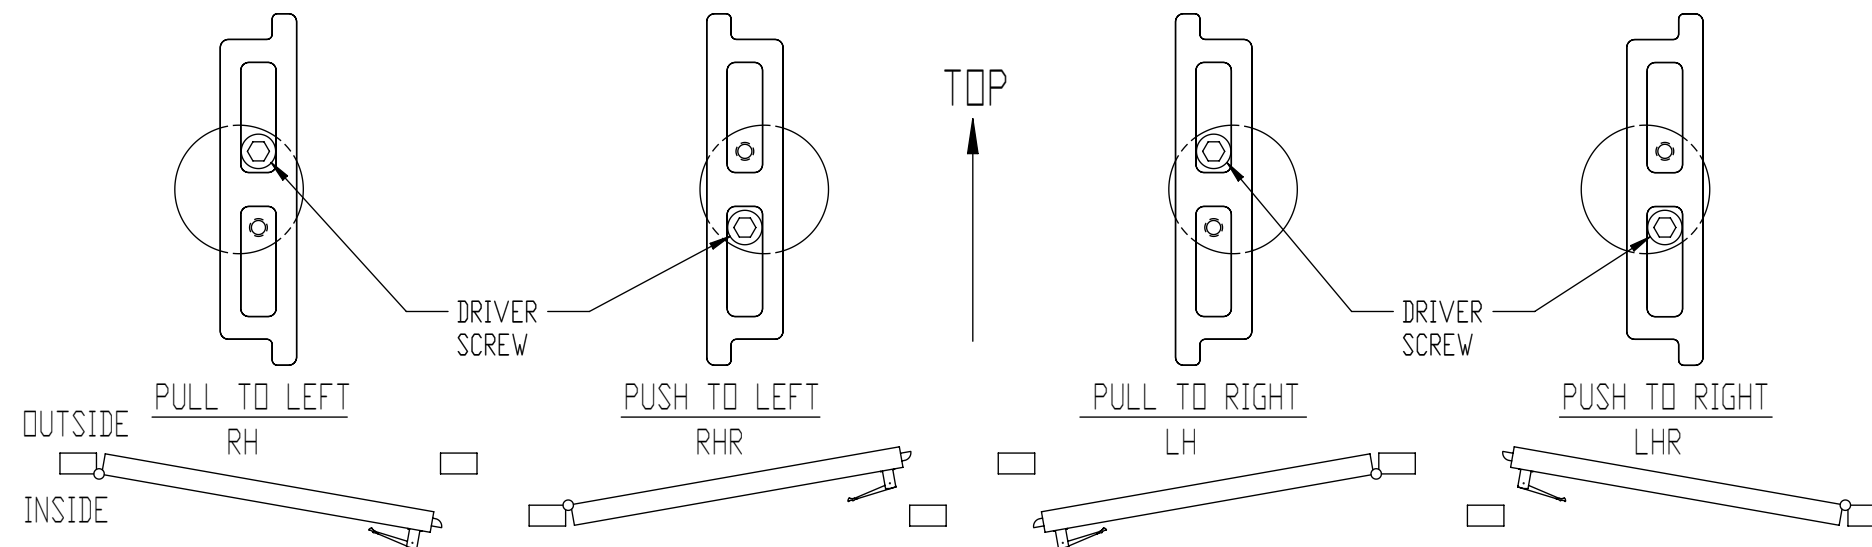

- 1.FIND DESIRED CONFIGURATION.
- 2.REMOVE KEEPERS TO SEE LOCATION OF SPRINGS & DRIVER PLATE.
- 3.REVERSE SPRINGS & DRIVER PLATE IF NECESSARY.
- 4.REMOVE DRIVER SCREW IF NECESSARY, AND PLACE IN DESIRED LOCATION.

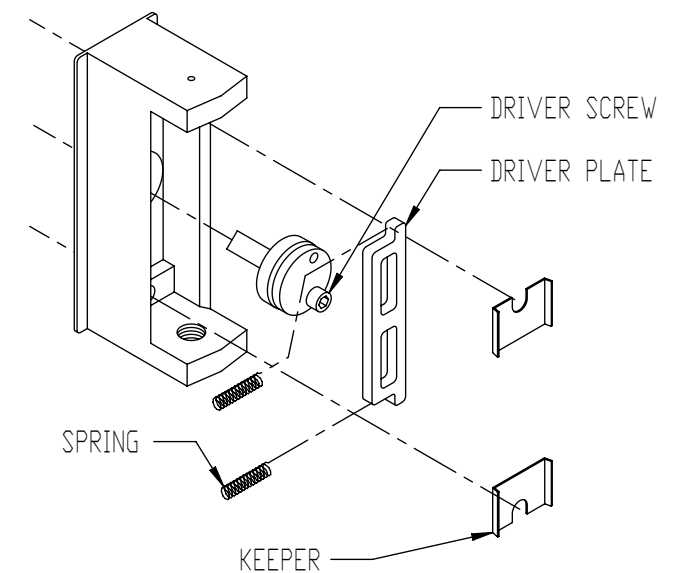

- 5.REPLACE KEEPERS.
- 6.CONFIGURE CAM DISC. (SEE REVERSE)