



**TRADEMARK  
HARDWARE**


WORLD OF QUALITY HARDWARE

# Installation Guide

## Utility Thresholds

- 1 Measure and cut threshold to size as required.
- 2 Notch as necessary, to suit door frame.
- 3 Caulk underneath and around edges of threshold for moisture control.
- 4 Attach threshold to floor surface with screws provided.

### Suggested Installation

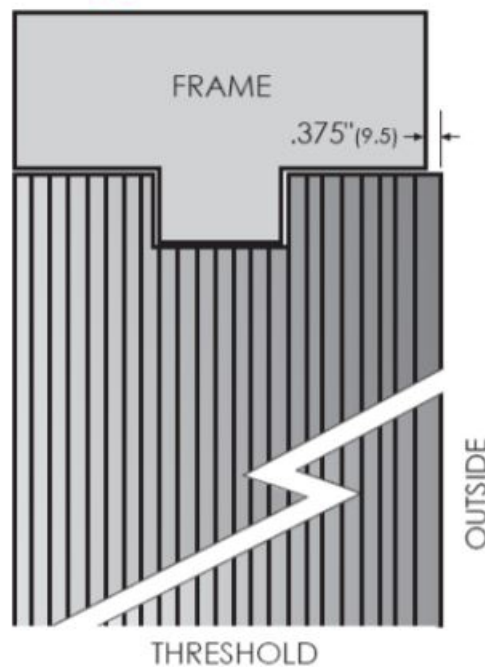

**SKU: Z63**



[www.tmhardware.com](http://www.tmhardware.com)



845-388-1300



845-388-1388



[sales@tmhardware.com](mailto:sales@tmhardware.com)