




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION GUIDE

Do not use a hammer for press-in

Pre-attached Ø8 dowels installed with Blum knock-in tool or MINIPRESS with universal insertion ram (both listed below).

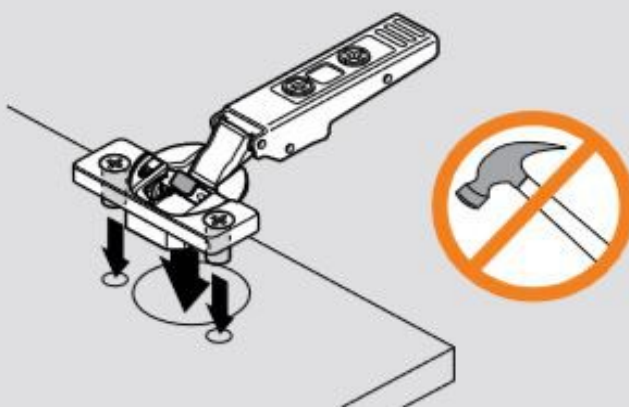

Knock-in tool

Can be used to insert all Blum press-in hinges.



Universal insertion ram

Can be used for inserting all Blum press-in Euro hinges

