



**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE


MOUNTING

INSTALLING ON CLEAT

STEP 1: PREDRILL HOOK MOUNTING LOCATIONS ON CLEAT AS SHOWN


STEP 2: PRESS HOOKS INTO MOUNTING LOCATIONS ON CLEAT

STEP 3: FIX HOOKS WITH TWO WOOD SCREWS AND FINISH WITH COVER CAP

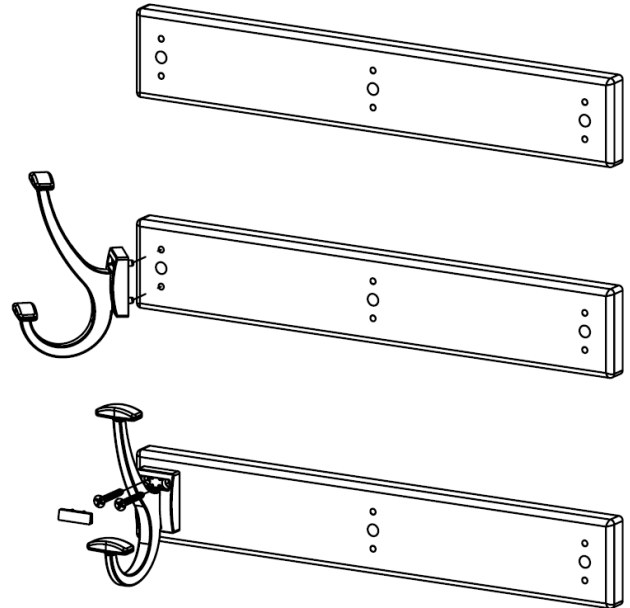

INSTALLING ON PANEL

STEP 1: PRESS HOOKS INTO SYSTEM HOLES ON PANEL

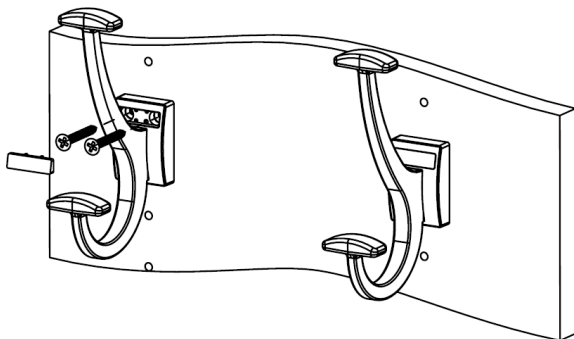

STEP 2: FIX HOOKS WITH TWO WOOD SCREWS AND FINISH WITH COVER CAP

SKU: 807.69.04



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com