TRADEMARK HARDWARE
WORLD OF QUALITY HARDWARE

Shower Threshold
Installation Guide

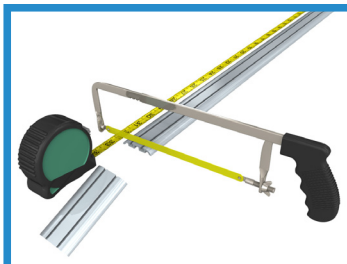

STEP 1:

Measure and cut threshold

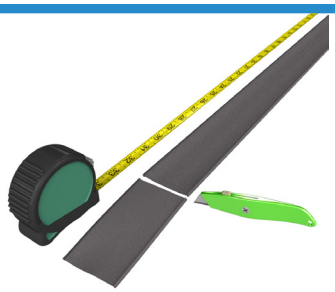

STEP 2:

Measure and cut rubber to fit.

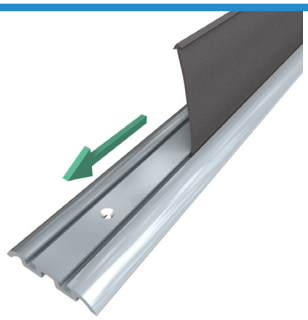

STEP 3:

Insert rubber by sliding edge into **one** side track.

STEP 4:

Screw down threshold.

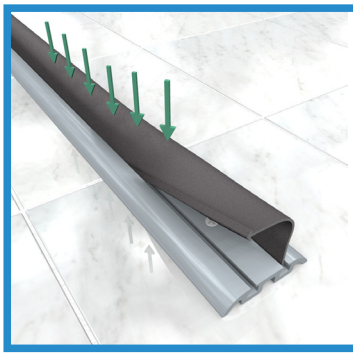

STEP 5:

Snap second edge of rubber into other track.

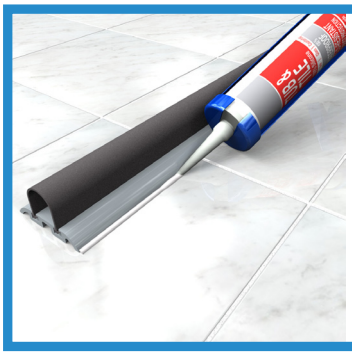

STEP 6:

Use waterproof silicone to seal around edges.

www.tmhardware.com
845-388-1300
845-388-1388
sales@tmhardware.com