
	30"	36″	42"	48"
А мід	26.88	32.88	38.88	44.88


## CUT-OFF INSTRUCTIONS FOR NON-STANDARD DOORS

- 1. DRIVE OUT TWO ROLL PINS.
- 2. REMOVE MOUNTING CAP.
- 3. COLLAPSE BAR AND TAPE DOWN IN THE AREA OF CUT-OFF
- 4. DETERMINE EXTRUSION LENGTH ("B" DIM). (NOTE: 3.6" MINIMUM DIMENSION FROM RIVET CENTERLINE TO NEW CUTOFF LENGTH AS SHOWN).
- 5. MEASURE MOUNTING BAR (NOT PUSH BAR), AND MARK EXTRUSION LENGTH ON TAPE.
- 6. SAW OFF EXCESS LENGTH, REMOVE TAPE AND DEBURR.
- 7. LAY MOUNTING CAP OVER MOUNTING BAR (FIG. "C"), AND
- USE AS A GUIDE TO DRILL TWO 0.125" DIA HOLES.

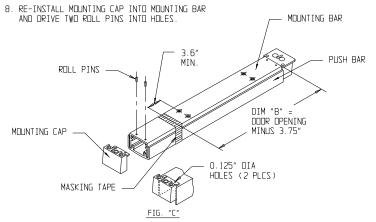

## SEPARATING PUSH BAR AND MOUNTING BAR PROCEDURE


- 1. REMOVE BOTH END CAPS. THE RETAINER IS ATTACHED TO THE NOSE END CAP
- 2. SLIDE PUSH BAR TOWARD HINGE SIDE OF DOOR.
- 3. CONTINUE TO SLIDE THE PUSH BAR PAST THE PIVOT PLATE THAT RIDES IN PUSH BAR TRACK.

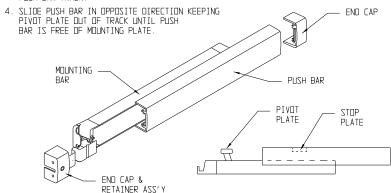

## INSTALLING PUSH BAR TO MOUNTING BAR

1. WITH PUSH BAR IN HAND AND MOUNTING BAR ATTACHED TO DOOR, FIND STOP PLATE STAKED INTO PUSH BAR. (THIS PLATE IS ON THE LATCH END OF ASSEMBLED UNIT). SLIDE THE PIVOT PLATE NEAREST HINGE INTO TRACK OF PUSH BAR UNTIL SECOND PIVOT PLATE IS EXPOSED. INSERT PIVOT PLATE INTO TRACK ON PUSH BAR AND SLIDE IN OPPOSITE DIRECTION UNTIL PUSH BAR AND MOUNTING BAR ALIGN.




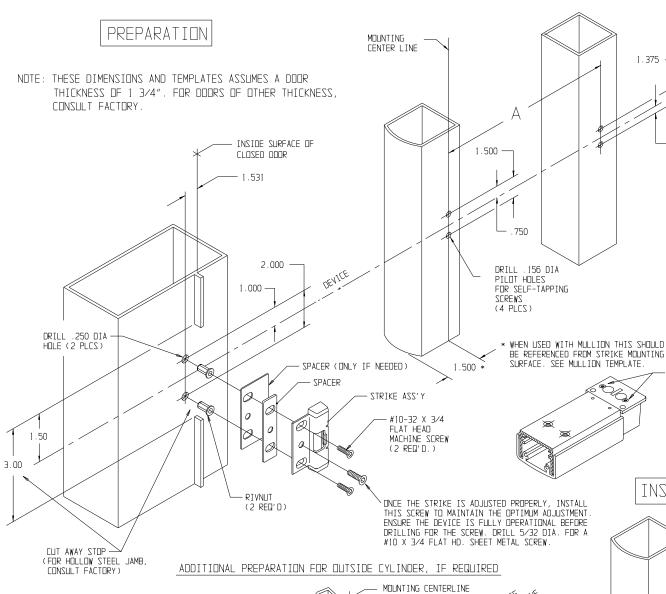


METRIC EQUIVALENTS							
INCHES	ММ	INCHES	ММ	INCHES	MM		
. 125	3,17	1.375	34,93	36	914,40		
.219	5,56	1.500	38,10	38.88	987,55		
. 250	6,35	1.531	38,89	42	1066,80		
. 375	9,53	2.000	50,80	44.88	1139,95		
.406	10,31	3.00	76,20	48	1219,20		
. 687	17,45	3.6	91,44	1/16	1,59		
. 750	19,05	4.125	104,78	3/16	4,75		
.813	20,65	26.88	682.75	5/8	15,88		
1.000	25,40	30	762,00	1 1/8	28,58		
1.156	29,36	32.88	835,15				

## INSTALLATION INSTRUCTIONS

- 1. CRIMP ALL RIVNUTS IN STILE AND JAMB ACCORDING TO INSTRUCTIONS WITH RIVNUT
  TOOL. SKIP INSTRUCTIONS 2 & 3 IF CYLINDER IS NOT USED.
- 2. INSTALL CYLINDER, USING SCREWS SUPPLIED WITH CYLINDER.
- 3. INSTALL MOUNTING BAR (IF CYLINDER IS USED, BE SURE THAT TAILPIECE PROTRUDES 3/16 INCH TO ENGAGE CYLINDER PROPERLY)
- 4. INSTALL PUSH BAR TO MOUNTING BAR (SEE INSTRUCTIONS LOWER LEFT HAND CORNER)
  - 5. INSTALL END CAPS
- 6. INSTALL STRIKE AND STRIKE PLUG. USE ENDUGH SPACERS SO THAT STRIKE CLEARS END CAP BY 1/16"

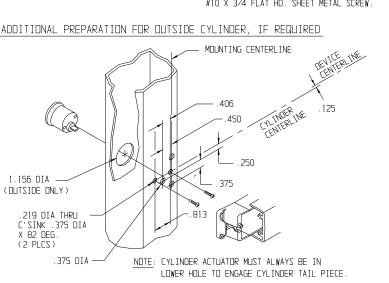

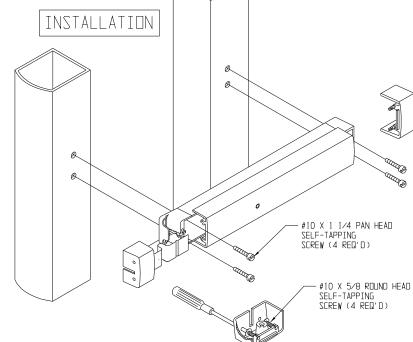

WHEN USED WITH OPTIONAL TRIM,

REMOVE LOWER SCREW ONLY

1.375

PRODUCT MUST BE INSTALLED ACCORDING TO ALL APPLICABLE BUILDING AND LIFE SAFETY CODES



www.adamsrite.com Phone: 800-626-7590

800-872-3267 Fax: 866-582-4641

800-232-7329

80-0180-41

8800 RIM EXIT DEVICE FOR ALUMINUM DOOR

INSTALLATION INSTRUCTIONS

Rev. N

Ecn 11955B

Date: 06/25/12

Appvd: MP

Page 1 of 1

Date: 07/06/12