



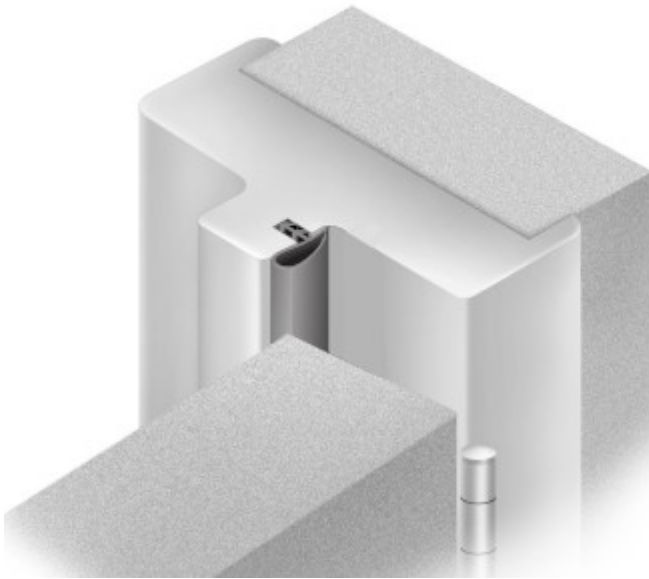

**Trademark
HARDWARE**

INSTALLATION GUIDE

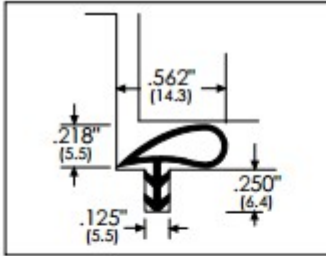

- 1** Pre-groove head and jambs before installation.
Cut a 1/8" x 1/4" (3.2mm x 6.4mm) groove in rebate. (See drawing for location.)
- 2** Measure and cut seals to the full length required.
(Small seals can be cut with scissors, but large seals should be cut with a sharp knife.)
- 3** Insert the seal into the groove by pressing with your finger. First, press in the two ends. Second, press in the middle. Third, press in the middle of each half. Fourth, press in the middle of each quarter, and so on until the seal has been inserted slightly every 6" to 8" (152mm to 203mm).
Make sure the seals properly installed by running your fingers along the entire length.

**Trademark
HARDWARE**

148 Horton Drive, Suite B
Monsey, New York 10952

Phone: 845.352.3200
Fax: 845.367.4657

www.TMHardware.com
sales@tmhardware.com