




**Trademark  
HARDWARE**

# How to Measure for Automatic Door Bottom

## **Mortised and Semi Mortised Automatic Door Bottom:**

Measure the door from side to side; that is the same size you need for your automatic door bottom.

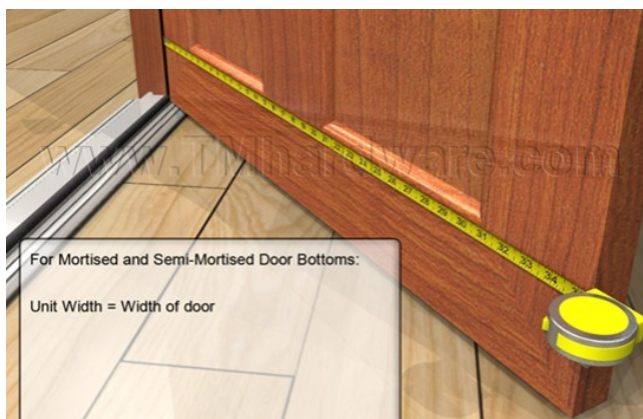

## **Surface Mounted Automatic Door Bottom:**

Measure between the 2 stop moldings that are on your door jambs (stop molding is the little wood piece that sticks out in the middle of your door frame that your door closes onto). Then deduct 1/8 of an inch and that is your measurement



When used in conjunction with a Jamb and Header / Perimeter Gasket, consider the extra width of the door stop and jamb gasket.

