

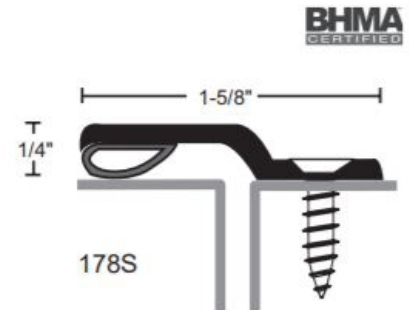


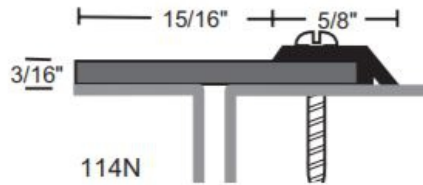

**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

Installation Guide

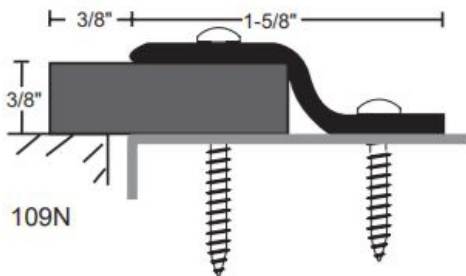

WARNING: Neoprene products can expose you to chemicals including chloroprene, which is known to the State of California to cause cancer and/or developmental and reproductive harm. For more information, go to www.P65Warnings.ca.gov.



ADVERTENCIA: Productos de neopreno pueden exponerlo a productos químicos incluyendo cloropreno, que el estado de California considera causante de cáncer y/o daños al desarrollo y al sistema reproductivo. Para mayor información visite la página www.P65Warnings.ca.gov.

Installation Instructions

1. Cut astragal to length.
2. Position as shown above.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" drill bit.
WARNING: Do not drill through gasketing material.
5. Install with screws provided, working from one end to the other.
6. Adjust astragal so it does not impede proper closing and latching of the doors.

SKU: N114N



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com